

Operation Manual easyTymp



Contents

1 Introduction	3
1.1 Intended Use Statement	3
1.2 Contraindications of Use	3
1.3 Features and Benefits of the easyTymp.....	4
1.4 Description	4
2 For Your Safety.....	7
2.1 How to Read This Operation Manual	7
2.2 Customer Responsibility	8
2.3 Manufacturer's Liability	8
2.4 Regulatory Symbols	9
2.5 General Precautions	10
2.6 Electrical Safety and Electrostatic Safety	10
2.7 Electromagnetic Compatibility (EMC).....	12
2.8 Device Control	12
2.9 Battery Safety	12
3 Warranty, Maintenance and After-Sales Service	13
3.1 Warranty	13
3.2 Maintenance	13
3.3 Cleaning and Disinfection Recommendations.....	14
3.4 Troubleshooting	18
3.5 Recycling and Disposal.....	20
4 Unpacking and Hardware Orientation	21
4.1 Unpacking the System	21
4.2 Hardware and Components	24
4.3 Software	30
4.4 Using the Thermal Printer (HM-E200 or MPT-II).....	30
5 Operating the Device	33
5.1 Getting started with the easyTymp.....	33
5.2 Preparing for Testing.....	34
5.3 Start the Test	37
5.4 Probe Status Indication	37
5.5 Testing	37
5.6 Setup Menu.....	47
5.7 Managing Test Results	51
6 Technical Data	53
6.1 easyTymp Hardware	53
6.2 Connections and Pin Assignment	60
6.3 Reference values for stimulus calibration.....	62
6.4 Electromagnetic Compatibility (EMC).....	63
6.5 Electrical Safety, EMC and Associated Standards.....	66
6.6 Test Protocols	67
7 Appendix.....	71

Title: **easyTymp** – Operation Manual

Date of issue/last revision: 09/03/2023



All available operation manuals can be found in the download center on the MAICO homepage:

MAICO Diagnostics GmbH
Sickingenstr. 70-71
10553 Berlin
Germany
Tel.: +49.30.70 71 46-50
Fax: +49.30.70 71 46-99
E-mail: sales@maico.biz
Internet: www.maico.biz

Germany:



<https://www.maico-diagnostics.com/german/support/resources/>

International:



<https://www.maico-diagnostics.com/support/resources/>

Copyright © 2023 MAICO Diagnostics.

All rights reserved. No part of this publication may be reproduced or transmitted in any form or by any means without the prior written permission of MAICO. The information in this publication is proprietary to MAICO.

Compliance

MAICO Diagnostics GmbH is an ISO 13485 certified corporation.

Caution for USA: Federal Law restricts this device to sale by or on the order of a licensed medical professional.

Trademark Notice

Sanibel® is a trademark of Interacoustics A/S registered in the USA and Europe.

1 Introduction

This section offers you important information about:

- the intended use of the device
- indications and contraindications for use
- features and benefits
- a description of the device

1.1 Intended Use Statement

The tympanometer is used to obtain information on medical conditions affecting the middle ear and to assess hearing.

Indications for Use

The easyTymp is an electroacoustic test device that produces controlled levels of test tones and signals intended for use in conduction diagnostic hearing evaluations and assisting in the diagnosis of possible otologic disorders. It features tympanometry and acoustics reflex.

It is intended to be used by audiologists, ENTs, hearing healthcare professionals, or other trained technicians in a hospital, clinic, healthcare facility or preferably other suitable quiet environment as defined in standard ISO 8253-1 or ANSI S3.1.

Target population

The easyTymp intended to be used for the identification of hearing loss and the factors that contribute to the occurrence of the hearing loss in the age range of infant to adults.

1.2 Contraindications of Use

Testing should not be performed on patients with one of the following symptoms without a medical doctor's approval:

- Recent stapedectomy or other middle ear surgery
- Discharging ear
- Acute external auditory canal trauma
- Discomfort (e.g., severe otitis externa)
- Occlusion of the external auditory canal
- Presence of tinnitus, hyperacusis or other sensitivity to loud sounds may contraindicate testing when high intensity stimuli are used

Visual inspection for obvious structural abnormalities of the external ear structure and positioning as well as the external ear canal should be performed before testing.

1.3 Features and Benefits of the easyTymp

The purpose of the easyTymp test system is to provide a rapid Tympanometry and Acoustic reflex measurements to measure the middle ear status where a pass or no response notation is identified. easyTymp provides an optional 1 kHz probe tone for testing infants. Factory defined protocols allow for simple screening measurements, and different versions are available that provide diagnostic testing functions. As with any type of hearing screening, a “pass” result should not overrule any additional concerns regarding middle ear function. A referral to physician should be administered if concerns about middle ear function persists.

The easyTymp cradle serves as a docking and recharging station for the handheld device and includes an opening for placement of the eartip box.

Using the included Software, the handheld unit will transfer data to a PC via USB-connection while in the docking station, or it can also transfer data directly via USB cable when no docking station is available.

The easyTymp comes in multiple versions and configurations dependent on the country and service partner. Each version provides specific testing functionalities dependent upon the user needs.

easyTymp (as Standard Version)

- Rapid tympanometry measurement
- Ipsilateral acoustic reflex measurements at several frequencies
- 1 kHz probe tone for international protocols (option)
- Special protocols for Sweden (option)

easyTymp Plus Version (Contra Probe Required)

- Rapid tympanometry measurement
- Ipsilateral acoustic reflex measurements at several frequencies
- Contralateral acoustic reflex measurements at several frequencies
- 1 kHz probe tone (option)

easyTymp Pro Version (Contra Probe Required)

- Rapid tympanometry measurement
- Ipsilateral acoustic reflex measurements at several frequencies
- Contralateral acoustic reflex measurements at several frequencies
- Acoustic reflex decay (Ipsilateral and Contralateral)
- Eustachian tube function
- 1 kHz probe tone (option)

1.4 Description

1.4.1 General

Dependent on the configuration the easyTymp offers the following Impedance measurements:

- Tympanometry
- Acoustic Reflex
- Contralateral Acoustic Reflex
- Acoustic Reflex Decay
- Eustachian Tube Function Test

Further information on the different tests are given in sections 1.4.2 to 1.4.6.

1.4.2 Tympanometry

Tympanometry is the objective measurement of middle ear mobility (compliance¹) and pressure² within the middle ear system (Figure 1). During the test, a low-pitched probe tone (226 Hz) is presented to the ear canal by means of the hand-held probe. This tone is used to measure the change in compliance in the middle ear system while the air pressure is varied automatically from a positive value (i.e. +200 daPa) to a negative value (i.e. -400 daPa max).

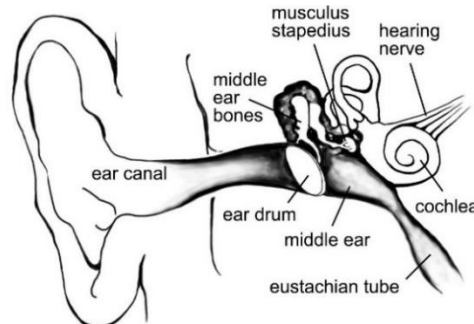


Figure 1

Maximum compliance of the middle ear system occurs, when the pressure in the middle ear cavity is equal to the pressure in the external auditory canal. This is the highest peak of the curve as it is recorded on the chart. The position of the peak on the horizontal axis and on the vertical axis of the chart will provide diagnostic information regarding the function of the middle ear system. Gradient calculations are reported as the Tympanogram width at half of peak compliance expressed in daPa. A normative box is available on both the display and printout to aid in diagnosis.

NOTE: 1 mmho \triangleq 1 ml for 226 Hz probe tone

1.4.3 Acoustic Reflex

An **Acoustic Reflex**, or contraction of the stapedial muscle, occurs under normal conditions when a sufficiently intense sound is presented to the auditory pathway. This contraction of the muscle causes a stiffening of the ossicular chain which changes the compliance of the middle ear system. As in **Tympanometry**, a probe tone is used to measure this change in compliance. When the stimulus presentation and measurement are made in the same ear by means of the probe, this acoustical reflex is referred to as an **Ipsilateral Acoustic Reflex**. When the stimulus presentation is made in the opposite ear of where the measurement is made, this acoustical reflex is referred to as a **Contralateral Acoustic Reflex**.

For best results, this reflex measurement is automatically conducted at the air pressure value where the compliance peak occurred during the **Tympanometric** test. Stimulus tones of varying intensities at 500 Hz, 1000 Hz, 2000 Hz or 4000 Hz are presented as short bursts. If a change in compliance greater than the selected value is detected, a reflex is considered present. Because this is an extremely small compliance change, any movement of the probe during the test may produce an artifact (false response). The test result is recorded as Pass/No Response, and in graphical form.

If the **Tympanometric** results display any abnormal findings, the results of the Acoustic Reflex testing may be inconclusive and should be interpreted with care. Theoretically, a compliance peak is necessary to observe a reflex at peak pressure.

¹ Compliance is measured with respect to an equivalent volume of air, with the scientific quantity milliliter (ml).

² Air pressure is measured in deca-Pascals (daPa).

1.4.4 Contralateral Acoustic Reflex

A **Contralateral Acoustic Reflex** is available with the easyTymp Plus and Pro Version. When the stimulus presentation and measurement are made in the different ears by means of the Contra Probe.

1.4.5 Acoustic Reflex Decay

An **Acoustic Reflex Decay** is available with the easyTymp Pro Version. Acoustic reflex decay, also known as adaptation, is the measurement of the **Acoustic reflex** response during sustained stimulus presentation. **Ipsilateral** and **Contralateral Reflex Decay** can be performed.

1.4.6 Eustachian Tube Function Test

The Eustachian tube connects the middle ear with the nasopharynx. Its function is to equalize pressure between the middle ear and the atmosphere.

The **Eustachian tube test** is available with the easyTymp Pro Version. It can be used to determine if the Eustachian tube is functioning properly in patients with an intact tympanic membrane or in patients who have a perforated TM or pressure equalization tubes.

2 For Your Safety

This section offers you important information about:

- how to read the operation manual
- where to spend special attention
- the customer responsibility
- the explanation of all regulatory symbols used
- important cautions and warnings that have to be considered while handling and operating your device

2.1 How to Read This Operation Manual

This Operation Manual contains information pertinent to the use of the MAICO easyTymp system including safety information as well as maintenance and cleaning recommendations.



READ THIS ENTIRE MANUAL BEFORE ATTEMPTING TO USE THIS SYSTEM!

Use this device only as described in this manual.

All images and screenshots are only examples and may differ in appearance from the actual device settings.

In this manual, the following two labels identify potentially dangerous or destructive conditions and procedures:



WARNING

The **WARNING** label identifies conditions or practices that may present danger to the patient and/or user.



CAUTION

The **CAUTION** label identifies conditions or practices that could result in damage to the equipment

NOTE: Notes help you identify areas of possible confusion and avoid potential problems during system operation.

2.2 Customer Responsibility

All safety precautions given in this operation manual must be observed at all times. Failure to observe these precautions could result in damage to the equipment and injury to the operator or subject.

The employer should instruct each employee in the recognition and avoidance of unsafe conditions and the regulations applicable to his or her work environment to control or eliminate any hazards or other exposure to illness or injury.

It is understood that safety rules within individual organizations vary. If a conflict exists between the material contained in this manual and the rules of the organization using this device, the more stringent rules should take precedence.



This product and its components will perform reliably only when operated and maintained in accordance with the instructions contained in this manual, accompanying labels, and/or inserts. A defective product should not be used. Make sure all connections to external accessories are snug and secured properly. Parts which may be broken or missing or are visibly worn, distorted, or contaminated should be replaced immediately with clean, genuine replacement parts manufactured by or available from MAICO.

NOTE: Customer responsibility includes proper maintenance and cleaning of the device (see sections 3.2 and 3.3). Breach of the customer responsibility can lead to limitations of Manufacturer's Liability and Warranty (see sections 2.3 and 3.1).

NOTE: In the unlikely case of a serious incident, inform MAICO as well as the competent authority in the country where the user is established.









 














2.3 Manufacturer's Liability

Usage of the device in a way deviant from the intended use will lead to a limitation or termination of the manufacturer's liability in case of damage. Improper use includes disregarding the operation manual, the operation of the device by underqualified personnel as well as making unauthorized alterations on the device.

2.4 Regulatory Symbols

The following Table 1 gives an explanation of the symbols used on the device itself, on the packaging and the accompanying documents including the Operation Manual.

Table 1 Regulatory Symbols

REGULATORY SYMBOLS	
SYMBOL	DESCRIPTION
	Serial number
	Date of manufacture
	Manufacturer
	Caution, consult accompanying documents
	Warning, consult accompanying documents
	Return to authorized representative, special disposal required
	Reference number
	Medical Device
	UDI information: (01) GTIN (Global Trade Item Number), (11) Date, (21) Serial number
	Patient applied part type B according to IEC 60601-1
	Refer to operation manual (mandatory)
	Keep away from rain
	Transport and storage temperature range
	Transport and storage humidity limitations
	Transport and storage atmospheric pressure limitations
	Isolation transformer
	Do not reuse
	CE label with notified body ID
	Non-ionizing electromagnetic radiation
	Label Marking of Radio Equipment based on Certified Type
	Direct Current (DC)
	ETL listed mark
	Logo

2.5 General Precautions



WARNING

Before starting a measurement make sure, that the device works properly.

Use and store the device indoors only. For operation, storage and transport conditions see table in section 6.

For operation in certain places, a recalibration may be necessary.



WARNING

No modification of this equipment is allowed.

Equipment is not user repairable. Repairs must be performed by a qualified service representative only. No modifications of the equipment are allowed by anyone other than a qualified MAICO representative. Modification of the equipment could be hazardous. No part of the equipment can be serviced or maintained while in use with the patient.

Do not drop or otherwise cause undue impact to this device. If the device is dropped or otherwise damaged, return it to the manufacturer for repair and/or calibration. Do not use the device if any damage is suspected.



WARNING

Calibration of the device: The device and the transducers complement each other and share the same serial number (i.e. MA7663252). Therefore, the device shall not be used with any other transducer prior to recalibration. Recalibration also needs to be conducted, when a defected headphone is replaced.

Uncalibrated devices may lead to faulty measurement results and could even damage the hearing of the examinee.

2.6 Electrical Safety and Electrostatic Safety



This icon indicates that patient applied parts of the device conform to IEC 60601-1 Type B requirements.



WARNING

In case of emergency, disconnect the device from the computer.

In Case of Emergency



WARNING

In case of emergency, disconnect the device from the power supply.

In Case of Emergency

Position the device in such a way that it can be easily disconnected from the power supply at any time.

Do not use the device if the mains cable and/or the plug is damaged.



WARNING

To transfer data to a PC, establishing a PC-connection via USB is required. See section 4.2.5 on how to safely establish a connection with a power supplied PC or laptop (medical device/non-medical device) or to a battery-driven laptop.



WARNING

This equipment is intended to be connected to other equipment thus forming a Medical Electrical System. External equipment intended for connection to signal input, signal output or other connectors shall comply with the relevant product standard e.g. IEC 62368-1 for IT equipment and the IEC 60601-series for medical electrical equipment. In addition, all such combinations – Medical Electrical Systems – shall comply with the safety requirements stated the general standard IEC 60601-1, edition 3, clause 16. Any equipment not complying with the leakage current requirements in IEC 60601-1 shall be kept outside the patient environment i.e. at least 1.5 m from the patient support or shall be supplied via a isolation transformer to reduce the leakage currents. Any person who connects external equipment to signal input, signal output or other connectors has formed a Medical Electrical System and is therefore responsible for the system to comply with the requirements. If in doubt, contact qualified medical technician or your local representative.



WARNING

A Separation Device (isolation device) is needed to isolate the equipment located outside the patient environment from the equipment located inside the patient environment. In particular such a Separation Device is required when a network connection is made. The requirement for the Separation Device is defined in IEC 60601-1 clause 16.



WARNING

If the device is connected to a PC (IT equipment forming a system) assembly and modifications shall be evaluated by qualified medical technician according to safety regulations in IEC 60601-series.



WARNING

The device is not intended for operation in areas with an explosion hazard. Do NOT use the device in a highly oxygen-enriched environment, such as a hyperbaric chamber, oxygen tent, etc. If the device is not used switch it off and disconnect it from the power supply. Never short-circuit the terminals.



WARNING

To avoid the risk of electric shock, this equipment must only be connected to the medical power supply originally delivered by MAICO. Using another power supply can also lead to electrical damage on the device.



WARNING

Prevent cable breakage: cables must not be bend or buckled.



WARNING

Remove batteries both in the hand-held device and the cradle if the device will not be used for some time.

2.7 Electromagnetic Compatibility (EMC)



This device is suitable in hospital environments except for near active HF surgical equipment and RF shielded rooms of systems for magnetic resonance imaging, where the intensity of electromagnetic disturbance is high.

The device fulfils the relevant EMC requirements. Avoid unnecessary exposure to electromagnetic fields, e.g. from mobile phones etc. If the device is used adjacent to other equipment it must be observed that no mutual disturbance appears.



Use of this device adjacent to or stacked with other equipment should be avoided because it could result in improper operation. If such use is necessary, this device and the other equipment should be observed to verify that they are operating normally.

The list of accessories, transducers and cables can be found in the Section 6.5 of this operation manual.



Portable RF communications equipment (including peripherals such as antenna cables and external antennas) should be used no closer than 30 cm (12 inches) to any part of this equipment, including cables specified by the manufacturer. Otherwise, degradation of the performance of this equipment could result in improper operation.

2.8 Device Control

The user of the device should perform a subjective device check once a week according ISO 8253-1. For annual calibration please see section 3.2.

See Section 4.2.7 for volume check.

2.9 Battery Safety



Observe the following precautions at any times:

- Keep the battery fully charged.
- Do not place the battery in fire or apply heat to the battery.
- Do not damage the battery or use a damaged battery.
- Do not expose the battery to water.
- Do not short-circuit the battery or reverse the polarity.
- Use only the charger provided with the easyTymp.
- Please see the following section for estimated charging times.

3 Warranty, Maintenance and After-Sales Service

This section offers you important information about:

- warranty conditions
 - maintenance
 - cleaning and disinfection recommendations
 - handling disposables
 - troubleshooting
 - recycling and disposal of the device
-

3.1 Warranty

The MAICO device is guaranteed for at least one year. Ask your authorized local distributor for more information.

This warranty is extended to the original purchaser of the device by MAICO through the distributor from whom it was purchased and covers defects in material and workmanship for a period of at least one year from date of delivery of the device to the original purchaser.

The device shall only be repaired and serviced by your distributor or by an authorized service center. Opening the device case will void the warranty.

In the event of repair during the guarantee period, please enclose evidence of purchase with the device.

3.2 Maintenance

In order to ensure that the device works properly, it has to be checked and calibrated at least every 12 months.

The service and calibration must be performed by your dealer or to a service center authorized by MAICO.

When returning the device for repairs or calibration it is essential to send the accessories (i.e. probe, cables, contra transducer, cradle, printer) with the device. Please include a detailed description of faults. In order to prevent damage in transit, please use the original packing when returning the device.

3.3 Cleaning and Disinfection Recommendations

3.3.1 General

It is recommended that parts (device and accessories like headphones, ear cushions) which come in direct contact with the patient be subjected to standard cleaning and disinfecting procedure between patients.

Recommendations for cleaning and disinfection of MAICO device presented in this document are not intended to replace or contradict policies in effect or procedures required for infection control at the facility.

If there is not a high infection potential, MAICO recommends:

- Before cleaning always switch off and disconnect the device from power supply.
- For cleaning use a lightly dampened cloth with soap water solution.
- Disinfect the plastic housing of the easyTymp and its accessories by wiping the surfaces with disinfectant wipes. Follow the instructions on the specific disinfection product.
 - Wipe before and after each patient
 - After contamination
 - After infectious patients
- Disinfect computer, keyboard, transport trolley etc. with disinfectant wipes:
 - once a week
 - after contamination
 - when polluted



To avoid damage of the device and its accessories, please mind the following:

- Do not autoclave or sterilize.
- Do not use the device in the presence of fluid that can come into contact with any of the electronic components or wiring.

Should the user suspect fluids have contacted the system components or accessories, the unit should not be used until deemed safe by a MAICO certified service technician.

Do not use hard or pointed objects on the device or its accessories.

For more detailed cleaning recommendations see the following sections 3.3.2 to 3.3.3.

3.3.2 Cleaning the Case and Cables



Use caution while cleaning.

Use a damp cloth to clean the plastic parts of the easyTymp.

If disinfection is required, use a disinfectant wipe rather than a spray product. Make sure that excess liquid from the wipe does not seep into any sensitive areas such as connectors and seams where plastic pieces connect such as the edges around the screen.

Follow the instructions on the disinfection product.

3.3.3 Cleaning the Probe Tip



Also, check-out our training videos:

MAICO Training | easyTymp | 13/13 Cleaning the Probe - YouTube

<https://www.youtube.com/watch?v=oU2awrPyY0o>

In order to secure correct impedance measurements it is important to make sure that the probe system is kept clean at all times. Therefore please clean the probe on a periodic basis. It is indispensable to remove cerumen from the probe tip's small Acoustic and air pressure channels. Therefore please follow the illustrated instructions below.



Figure 2

Never clean the probe tip while the tip is still attached to the probe (Figure 2).



Figure 3

1. Unscrew the probe cap by turning it in a counter clockwise direction (Figure 3).



Figure 4

2. Take the plastic probe tip out of the probe (Figure 4).

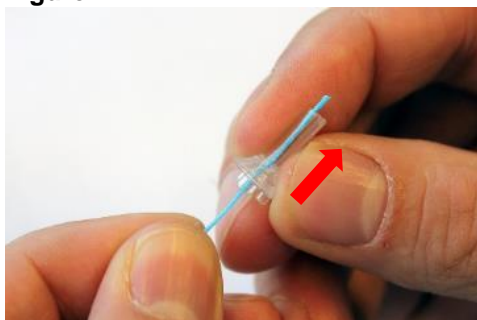


Figure 5

3. Insert the blue end of the floss from back to front through one of the probe channels. Pull the floss along its entire length through the channel (Figure 5).

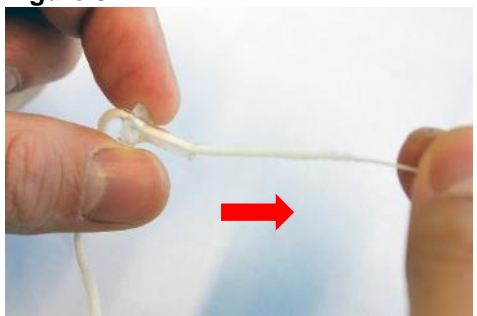


Figure 6

4. Proceed in the same way with all 4 probe channels. Use the floss only once (Figure 6).



Figure 7

5. Place the probe tip back onto the probe. Make sure that the plastic pegs are inserted into the appropriate corresponding cavities (Figure 7).

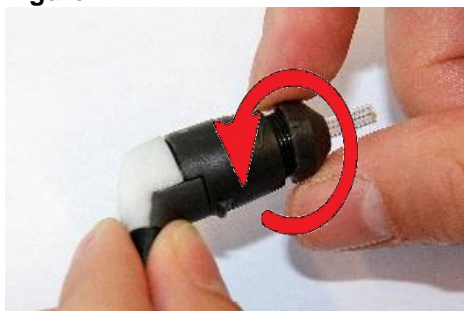


Figure 8

6. Screw the probe cap back on the probe (Figure 8). The force of tightening the cap will tighten the screw sufficiently. Never use tools to fix the probe cap!

If any blockage or damage occurs to the sealing gasket, the probe system can only be serviced by MAICO.

Cleaning alternative:



Figure 9



Figure 10



Figure 11

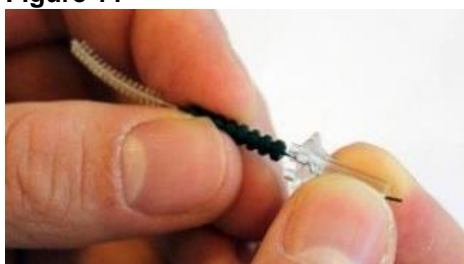


Figure 12

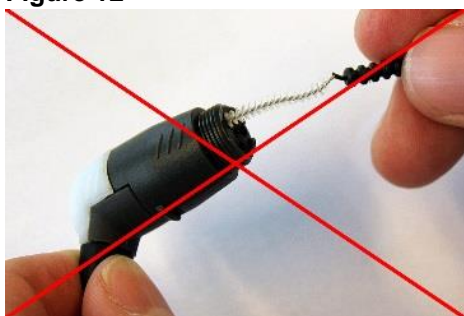


Figure 13

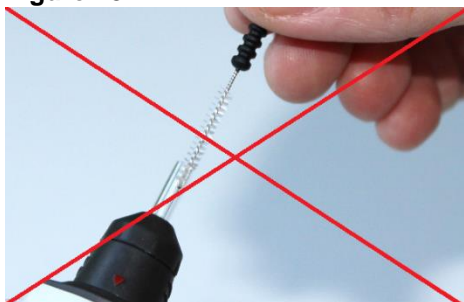


Figure 14

Use the cleaning set from the eartip box (Figure 9): Take the cleaning tool apart to find the thin brush and thin rigid plastic cord (Figure 10).

Use the plastic cord or brush to push debris out of the probe tip (Figure 11).

Always enter the probe tip from the rear to avoid accumulation of debris inside the vents (Figure 12).



CAUTION

This procedure destroys the probe (Figure 13).



CAUTION

This procedure destroys the probe (Figure 14).

3.3.4 Disposables

NOTE: MAICO strongly recommends to use Sanibel® eartips for reliable results. Both Sanibel® ADI series and IA mushroom series eartips are suitable for the easyTymp.



Figure 15

Operating the easyTymp will require the use of eartips – either mushroom shaped (1) or umbrella (2) eartips (Figure 15).



Eartips are intended for single-use only. These must be discarded after use. They cannot be cleaned.



WARNING

In case of re-use of the single-use equipment you enhance the risk of cross contamination!

MAICO strongly recommends to use Sanibel® eartips only. In case you want to purchase further disposables, please contact MAICO or your local distributor.






3.3.5 Components/Replacement Parts

Some reusable components are subject to wear with use over time. MAICO recommends that you keep these replacement parts available (as appropriate for your easyTymp device configuration).

3.4 Troubleshooting

Table 2 Troubleshooting

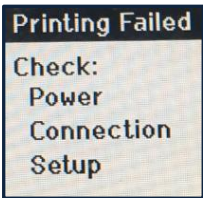Issue	Solution
White Screen	If the device shows white screen after turning on, make sure battery is fully charged.
Frozen Display	<p>If the display freezes try</p> <ul style="list-style-type: none"> to restart the unit to shut off the system and change the battery <p>NOTE: Please do not take out the battery before turn off. Always turn off the device and then take out the battery.</p>
Battery cavity	<ul style="list-style-type: none"> Please check that the battery is properly inserted into the compartment. Please check that the battery connector (spring contacts) inside the compartment is clean and working properly.
Probe	Make sure the probe tip is inserted correctly into the probe. Otherwise, follow the suggestions in Probe tip.
Probe tip	<ol style="list-style-type: none"> Please clean the probe tip as described in the manual. If the system still does not run proceed with step 2. Use a new probe tip. If the system still does not run proceed with step 3. Change the complete probe and check if the system is running.
Extension cable	<p>If the device shows leaking, please</p> <ol style="list-style-type: none"> Follow the suggestions for probe tip/ Probe. If step 1 is not helpful, please change the extension cable. If the problem persists follow the suggestions for Probe tip/Probe.

Issue	Solution
Battery slot	<ol style="list-style-type: none"> 1. If the spare battery is not charging, please, check if the battery is properly inserted and the terminals are in contact (springs in cradle). 2. Please make sure the battery contacts are clean in the case.
Connection in cradle	<ol style="list-style-type: none"> 1. Make sure the handheld is properly inserted after the test. Improper docking may lead to no connection between device and the cradle. 2. Please make sure battery contacts are clean in the case.
Printer problem (wireless printer)	<p>If the  button is pressed prior to the easyTymp/printer connection, the following error will appear (Figure 16). Select  on the easyTymp to remove the error message and follow the instructions below before attempting to print again.</p>  <p>Figure 16</p> <ol style="list-style-type: none"> 1. Please, check if the printer function in the device is set to Wireless Printer and the printer is turned on. 2. Please, check the printer icon  is displayed at the top right corner of the screen. 3. Please, check if the printer paper is properly inserted. 4. Make sure nothing is disturbing the connection between printer and device (distance, persons or objects between printer and device). If the connection has been disturbed while printing, restart the printing process by pressing . 5. Make sure the printer battery is fully inserted and is charged (also see section 4.4.3.1. for more information on charging light indicator). If the battery is not sufficiently charged, charge it using the power supply unit for the printer.



MPT-II Printer only: Make sure to only use the right power supply unit for the printer with the label shown in Figure 17 (12 V/1.25 A UES18LCP-120125SPA). Otherwise, the printer could get damaged due to excessive voltage.



Figure 17

Issue	Solution
PC Connections	<ol style="list-style-type: none"> 1. Make sure the Patient database and the printer is deactivated from handheld. 2. Handheld: <ol style="list-style-type: none"> a. Please check the USB connection in the PC and the system. b. Use another USB cable. 3. Cradle: <ol style="list-style-type: none"> a. Make sure the device is properly placed into the Cradle. b. Make sure the Cradle is powered while transferring the result to PC. 4. Make sure the easyTymp option is selected in the PC software (for detail contact your distributor). 5. Try to reinstall the PC software. Check the device manager in the PC. If the easyTymp does not appear in the list install the driver again using the installation CD.

3.5 Recycling and Disposal



Within the European Union it is illegal to dispose of electric and electronic waste as unsorted municipal waste. According to this, all MAICO products sold after August 13, 2005, are marked with a crossed-out wheeled bin. Within the limits of Article (9) of DIRECTIVE 2002/96/EC on waste electrical and electronic equipment (WEEE), MAICO has changed their sales policy. To avoid additional distribution costs we assign the responsibility for the proper collection and treatment according to legal regulations to our customers.

Non-European countries

Outside the European Union, local regulations should be followed when disposing of the product after its useful life.



WARNING

Batteries may explode or cause burns, if disassembled, crushed or exposed to fire or high temperatures.

4 Unpacking and Hardware Orientation

This section provides information on:

- unpacking the system
 - becoming familiar with the hardware inclusive connections
 - how to store the device
 - becoming familiar with the Probe and the External Probe
 - using the MPT-II thermal printer
-

4.1 Unpacking the System

Check Box and Contents for Damage

- It is recommended that you unpack your easyTymp carefully making sure that all components are removed from the packing materials.
- Verify that all components are included as shown on the packing slip included with your shipment.
- If any component is missing, contact your distributor immediately to report the shortage.
- If any component appears to be damaged in shipment, contact your distributor immediately to report it. Do not attempt to use any component or device that appears to be damaged.

Reporting Imperfections

Notify the carrier immediately if any mechanical damage is noted. This will ensure that a proper claim is made. Save all packaging material so the claim adjuster can inspect it as well.

Report Immediately any Faults

Any missing part or malfunction should be reported immediately to the supplier of the device together with the invoice, serial number, and a detailed report of the problem.

Keep Packaging for Future Shipment

Save all the original packing material and the shipping container so the device can be properly packed if it needs to be returned for service or calibration (see section 3.2).

The easyTymp comes with different components (see the following tables). The availability of configurations with the following components is country and version specific. Contact your local distributor for more information.

Components

easyTymp Handheld Unit
MAICO Sessions Kit
Probe*
Short Extension Cable for Probe (350 mm incl. Cable)*
Cradle Kit (Component List, See Below)
Printer MPT-II Kit (Includes 2 Rolls of Thermal Paper, rechargeable battery pack, Printer Power supply/charger with plug adapters (12 V/1.25 A) UES18LCP-120125SPA)
Printer HM-E200 Kit (Includes 2 Rolls of Thermal Paper, Printer Power Supply Unit/Charger with Plug Adapters (5 V/1.6 A) UES12LCP-050160SPA)
Power Supply Unit (5 V/2.5 A) UES18LCP-050250SPA
Incl. USB Adapter for easyTymp Handheld Unit
Rechargeable Battery
Eartip Box (See Below)
Probe Cleaning Kit
Test Cavity
Operation Manual**
Quick Guide**
Carrying Case
Wall Mount Kit for Cradle with Integrated Eartip Box, Power Supply Unit and Additional Rechargeable Battery
Only for Plus and Pro Version
Contra Probe (1400 mm Incl. Cable)*
CIR (Contralateral Earphones)*
DD45C (Contralateral Headphone)*
IP30 Contralateral Insert Earphones*
Quick Guide (Pro or Plus Version)

*Applied parts according to IEC 60601-1

**As download from the download center - see accompanying leaflet

Cradle Kit

Cradle
USB Cable
Power Supply Unit (24 V/1 A) UES24LCP-240100SPA
Rechargeable Battery

Licenses

Licenses

License for International Protocols: High Frequency Probe Tone of 1 kHz
License for Plus Version: Acoustic Reflexes Contra
License for Pro Version: Acoustic Reflexes Contra, Decay and ETF
License for PC Connection (Sessions)

NOTE: License for Plus and Pro version: An upgrade to the device version is required.

Disposables Supplied

NOTE: MAICO strongly recommends to use Sanibel® eartips for reliable results. Both Sanibel® ADI series and IA mushroom series eartips are suitable for the easyTympanometer.

Eartip Box

Samples of Sanibel® Eartips

Probe Tip

Probe Cleaning Tool

Eartip Removal Tool

Allen key SW: s = 2 mm (see section 4.2.1.3)

NOTE: It is possible to purchase either the whole Eartip Box or single items listed.

Consumable Material

Consumable Material

Printer Paper

Replacement Eartips


Probe Tip

Cleaning Floss

4.2 Hardware and Components

4.2.1 Cradle

4.2.1.1 Installing the Cradle

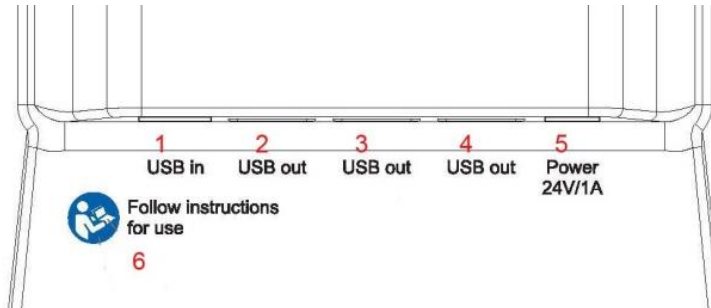

- 1 = USB in
- 2 = USB out
- 3 = USB out
- 4 = USB out
- 5 = Power 24 V
- 6 = Follow the instructions for use

Figure 18

Put the enclosed mains cable into the power connection socket #5 and the mains plug into a power socket.

NOTE: In case you also use the wireless printer make sure you take the right power supply (24 V/1A), UES24LCP-240100SPA) to connect to the cradle. Otherwise loading times can rise.

4.2.1.2 Cradle Indication Lights

The cradle has two indication lights (Figure 19).



Figure 19

- easyTymp LED shows solid blue when it is placed inside the cradle. The battery will be charged automatically and will be fully charged after approximately three hours. The current battery state of charge may be seen on the easyTymp display.
- Battery LED shows solid blue when the spare battery in the cradle is fully charged. The LED will flash while the battery is charging.

NOTE: Upon initial setup, always plug the cradle into the outlet while the easyTymp is out of the cradle.

4.2.1.3 Mounting the Cradle on the Wall (optional accessory)



Figure 20

In order to mount the cradle on the wall, an optional wall mount kit is available (Figure 20)

4.2.2 Adjust the Cradle

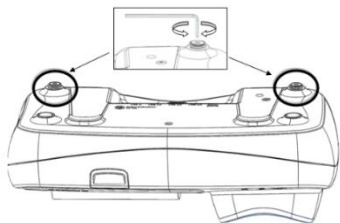


Figure 21

Use the Allen key to adjust the cradle on the Figure 21.

NOTE: An Allen key is enclosed in the packaging of the eartip box to enable adjustment of the pair of adjustable feet located on the bottom of the cradle.

Please ensure that the Allen key is only used to adjust the setting of the adjustable feet on the cradle and that this tool is not used for any other purpose on the easyTymp unit.

4.2.3 easyTymp Plus and Pro Version: Connecting the Contralateral Headphones or Insert Earphones



Figure 22

To measure **Contralateral Reflexes** it is necessary to connect the Contra Probe to the easyTymp as described previously.

Find the jack labeled “**Contra**” on the Contra Probe. Insert the **Contralateral** transducer into this jack (Figure 18).

The Contra Probe must be calibrated to the selected **Contralateral** transducer type. This calibration is already completed if the Contra Probe and transducer are purchased at the same time. Otherwise, the Contra Probe and transducer need to be sent to an authorized service center to perform the calibration.

NOTE: Three different Contra phones can be purchased for use with the easyTymp. The Contra phones need to be calibrated to the Contra Probe before use. If a new Contra phone should be used a recalibration of the Contra Probe is necessary. We strongly advise against using an uncalibrated Contra Phone! Uncalibrated devices may lead to faulty measurements and possibly damage the patient’s hearing.

4.2.4 Changing Probes



Figure 23

To release the probe, press the circular button on the back of the device and pull the probe out (Figure 23).

NOTE: Do not pull on the extension cable as this can damage the tubing connection!



Figure 24

Connect the probe to the easyTymp by lining up the red triangles and pushing the probe into the unit (Figure 24).



Figure 25

The probe can be attached to the extension cable by correctly lining up the pins and clicking the probe into the end of the extension cable (Figure 25).

4.2.5 Establishing a PC-Connection

To transfer data to a PC, establishing a PC-connection via USB is required. If the easyTymp is used with office equipment that is not medical electrical equipment (ME equipment) itself (see Table 3, PC-Connection 1), make sure to establish the PC-connection in one of the following ways (see Table 3, PC Connection 2, 3 or 4).



WARNING

Make sure you use only office equipment with the device that is a medical device itself or meets the requirements of IEC 62368-1. If non-medical electrical equipment is used within the patient environment (1.5 m from patient as defined in IEC 60601-1) a isolation transformer must be used (exception: a battery-driven laptop is used).

Table 3 PC-Connections

PC CONNECTIONS	
PC Connection 1: ME equipment – ME equipment	PC Connection 2: ME equipment – Non-ME equipment
PC Connection 3: ME equipment – Non-ME equipment	PC Connection 4: ME equipment – Laptop (battery-driven)

4.2.6 Battery

4.2.6.1 Installing the easyTymp Battery



Figure 26

The battery compartment is opened by gently pressing the indentation and pushing the cover downwards (Figure 26).



Figure 27

Place the battery inside the compartment (Figure 27).



Figure 28

Make sure the battery contacts are aligned before pushing the battery into place (1) and the removal-tab is easy to reach (2) (Figure 28).



Figure 29

The removal-tab, attached to the back of the battery case, should be wrapped around the battery to remove it easily (Figure 29).



Figure 30

Replace the lid on the easyTymp and push it upwards to close the battery compartment (Figure 30).

It is recommended that the battery is removed from the device when it is not in use for extended time periods.

4.2.6.2 Charging the easyTymp Battery

NOTE: The battery needs to be charged for a minimum period of approximately 6 hours prior to first use of the easyTymp.

Charging the Battery in the Device Using the Power Supply Unit

Use power supply unit UES18LCP-050250SPA.

To charge, plug the power supply unit's connector into the micro-USB port on the bottom of the device.

Charging the Battery in the Cradle



Figure 31

Use power supply unit UES24LCP-240100SPA to charge the cradle.

Place the device in the cradle for charging.

Charging the Spare Battery in the Cradle



Figure 32

The device comes with a spare battery (Figure 32).

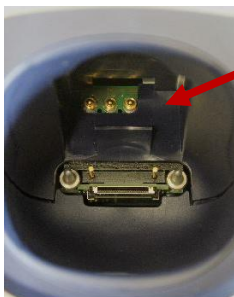


Figure 33

Store and charge the spare battery in the back of the cradle (Figure 33).

Replace the battery according to the instructions in section 4.2.6.1.

4.2.6.3 Battery Life

The following table gives an estimate of the charging time (CT) in hours for the battery. Be aware that negative numbers mean that the battery is discharging. Charge times are the same for the spare battery in the cradle and the battery in the cradled easyTymp. See also Table 4.

Table 4 Charging time easyTymp

	CT through cradle up to 80 %	CT through USB (PC) up to 80 %	CT through cradle up to 100 %	CT through USB (PC) up to 80 %
Off	1.5	3.8	2.3	5.7
On (pump off)	2.8	-32	4.1	-47

4.2.7 Test cavities

The easyTymp comes with a separate test cavity which can be used to quickly check the probe calibration validity. The test cavity includes 0.2 ml, 0.5 ml, 2.0 ml and 5.0 ml cylinders. We strongly recommend calibrating each probe at least once a year. If a probe is handled roughly (e.g. has fallen onto a hard surface) it might need to be calibrated again. Calibration values of the probe are stored in the probe itself. Therefore probes can be exchanged at all times.

4.2.8 Storage

When the easyTymp is not in use, store it in the optional carry case or in a location where it will be safe from damage to the screen or other sensitive components such as the Acoustic transducers and cables. Store according to the recommended temperature conditions described in section 6.1.

4.3 Software

You can view and store all measurements with the MAICO Sessions.

NOTE: For installation and functions see the software operation manual. For transferring data to the PC see section 5.6.

4.4 Using the Thermal Printer (HM-E200 or MPT-II)

4.4.1 Connection the Thermal Printer to the easyTymp

The connection of the easyTymp and the printer is made via wireless pairing. See section 5.6.5.

NOTE: It is possible to pair four devices with one printer. Do not have several printers powered on and within range while searching.

4.4.2 Using the HM-E200 Thermal Printer

4.4.2.1 Powering the HM-E200 Thermal Printer



Figure 34

The thermal printer is powered by a Lithium-ion battery. Use the micro USB power supply delivered by MAICO to power the thermal printer (Figure 34).

4.4.2.2 Insert Paper Rolls Into the HM-E200 Thermal Printer

The printer indicates that it has run out of paper by displaying the message **"Out of paper"** on the screen and the blue LED (ERROR) flashes (Figure 35).

Open the printer by pressing the small latch button (Figure 36).

Insert the paper roll into the printer with the paper end placed towards the open cover. Hold the paper end in place and close the cover. Turn the printer on and press the feed button on the left side so that the printer can properly align the paper with the print head (Figure 37).



Figure 35



Figure 36



Figure 37

4.4.3 Using the MPT-II Thermal Printer

4.4.3.1 Powering the MPT-II Thermal Printer

Battery pack insertion



Figure 38

Insert battery as shown (Figure 38).

Charging the battery



Figure 39

The thermal printer is powered by a Lithium-ion battery. In order to charge the battery you must insert the plug of the power supply into the laterally placed socket and plug the power supply with the proper plug adapter into an outlet (Figure 39).



Figure 40

Make sure to only use the right power supply for the printer with the label shown in Figure 17 (12 V/1.25 A UES18LCP-120125SPA). Otherwise the printer could get damaged due to excessive voltage.

Power on


Push **power button**  for two seconds in order to power on or off. One short beep will be heard at power on, two short beeps at power off.



















Figure 41

Green Power indicator will be lit if printer is powered by battery (Figure 41).



NOTE: Selecting Print on the easyTymp when the printer is off will result in an error message. Printer must be on and in close proximity of the easyTymp for printing to proceed.

Charging Light Indicators

Table 5 MPT-II Charging Light Indicator

Green LED indicator	Blue LED indicator	Status	Sound	Note
Off	 Fast flash	 Charging	-	Power On
Off	 On	 Charging	-	Power Off
Off	 Slow flash	 Battery nearly discharged	-	-
Off	 On	 Charging completed	-	Power On
Off	 Off	 Charging completed	-	Power Off
On	 Off	 Power ON, battery powered	-	-
Slow flash	 Slow flash	 Out of paper	Beep	-
Slow flash	 Off	 Sleep mode	-	-

Self-test

When printer is powered off, press and hold **paper feed**  button, then press and hold **power button**  simultaneously. When beep is heard after approx. 3 seconds, release both buttons, and a test page will print with information on current status and character samples.

4.4.3.2 Insert Paper Rolls Into the MPT-II Thermal Printer

Open the lid by pushing on the sides (Figure 42), insert paper roll as shown (Figure 43), and close the lid (Figure 44).



Figure 42



Figure 43



Figure 44

Paper feed

When powered press **paper feed**  button. Paper will feed as long as the button is pressed.

NOTE: Reorder paper from MAICO or your local distributor.

5 Operating the Device

This section offers you information about:

- how to get started with the easyTymp
 - the operating panel
 - preparing the patient for testing
 - performing impedance testing
 - settings to be made
 - managing the test results
-

5.1 Getting started with the easyTymp

5.1.1 Use of Equipment After Transport and Storage

Make sure the device is functioning correctly before use. If the device has been stored in a colder environment (even for short time) allow the device to become acclimatized. This can take a long time depending on the conditions (like environmental humidity). You can reduce the condensation by storing the device in its original packaging. If the device is stored under warmer conditions than the use conditions no special precaution are required before use. Always ensure proper operation of the device by following routine check procedures for audiometric equipment.

5.1.2 Where to Setup

The easyTymp should be operated in a quiet room, so that the audiometric examinations are not influenced by outside noises. Ambient sound pressure levels in an audiometric test room shall not exceed the values specified in ISO 8253 series or ANSI S3.1.

Electronic devices, which emit strong electromagnetic fields (e.g. microwaves or radiotherapy devices), can influence the function of the audiometer. Therefore, it is not recommended to use these devices in close proximity to the audiometer as it may lead to incorrect test results.

The test room must be at a normal temperature, usually from 15 °C/59 °F to 35 °C/95 °F, and the device should be switched on approximately 10 minutes before the first measurement. If the device has been cooled down (e.g. during transport), please wait until it has warmed to room temperature before using.

NOTE: For temperature and warm-up time see Section 6.1.

5.1.3 Operating Panel



Figure 45

Function Keys (Figure 45):



Top buttons: Function of the keys is related to the functions indicated in the display above the individual function key (e.g., **Select Test, Patient, Stop**)



Arrow Keys: Turn on easyTym by pressing the right or left arrow key.

Turn off easyTym by pressing both keys at the same time.

Selection of the right or left ear to be tested.



Up and down buttons: Scroll through the different easyTym settings menu, test protocols or scroll up and down on the display.

5.2 Preparing for Testing

5.2.1 Preparing the Patient



Also, check-out our training videos:

MAICO Training I easyTym | 2/13 Test Environment - YouTube

<https://www.youtube.com/watch?v=-2HXIm34Ug>

Make sure that the patient is comfortable on a chair or on an examination table if necessary. Small children may feel more comfortable sitting on a parent's lap.



WARNING

Keep in mind the indication and contraindications of use given in sections 1.1 and 1.2.

5.2.2 Visual Inspection of the Ear Canal

Check the external ear canal for wax with an otoscope. Excessive wax should be removed by a qualified professional to prevent the probe opening from clogging which will inhibit testing. Excessive hairs may have to be cut for a seal to be obtained.

5.2.3 Impedance Measurements

Show the probe to the patient and then explain the following:

- An eartip is placed on the tip of the probe and inserted into the ear canal. A seal must be achieved for the test to progress.
- Coughing, talking and swallowing will disturb test results.
- The aim of Tympanometry is to test the mobility of the eardrum and the condition of the middle ear.
 - A small amount of air will flow through the probe to move the eardrum; it produces a sensation equal to pressing a finger slightly into the ear canal.
 - One or more tones will be heard during the test. No participation is expected from the patient.
- The aim of Acoustic Reflexes is to test the condition of the Musculus stapedius.
 - One or more louder tones will be heard during the test. No participation is expected from the patient.

5.2.4 Handling the Eartips

Choose the proper size of eartips based on your inspection of the size of the patient's ear canals.



Do not insert the probe without having an eartip attached to prevent damage to the patient's ear canals.



Figure 46

Put the eartip tightly on the probe tip making sure it is pushed all the way down (Figure 46).



Figure 47

Insert the probe with eartip attached into the patient's ear. For children and adults, pull gently up and back on the outer ear (i.e. Pinna) during insertion to straighten the ear canal. Hold the adapter and aim and twist (gently) the eartip into the ear canal. The fit of the eartip should be secure; not superficial (Figure 47). Release the earlobe. When testing infants, gently pull the Pinna down and back to straighten the ear canal.



Each eartip should only be used once. For more detailed information see section 3.3.4.



Figure 48

In order to remove the eartip, grasp the eartip at the base using the **eartip removal tool** and pull it smoothly straight off the probe tube (Figure 48).

NOTE: If the probe tip becomes dirty or clogged, it must be cleaned (see section 3.3.3) or replaced

5.2.5 easyTym Plus and Pro Version: Placing and Using the Contra Probe



Figure 49

A clip is located on the back of the **Contra Probe** which can be attached to the patient's clothing (Figure 49). For most patients it is easiest to clip the Contra Probe to the patient. When a child is being held by a parent, clip the **Contra Probe** to the parent's clothing.



Figure 50

Press the button on the **Contra Probe** to start or stop/pause the current measurement or switch between right and left when the probe is not inserted to the ear (Figure 50).

5.2.6 easyTym Plus and Pro Version: Placement of Contralateral Earphones

Multiple transducers are available for purchase to perform **Contralateral** measurements.



Figure 51

If the CIR or insert phone is used, place the proper eartip on the insert before inserting the phone into the non-test ear (Figure 51).



Figure 52

If the DD45C is used, place the head band over the patient's head. The audiometric headphone is placed over the non-test ear (or **Contralateral Reflex** ear) (Figure 52).

5.3 Start the Test

To get started, removing the easyTymp from the cradle will turn the device on automatically.

If you don't store the easyTymp in the cradle, press either the red or blue arrow key to switch the device on.

The easyTymp will always start within the test screen, ready to start a measurement. It will always default to the same protocol as previously used.

5.4 Probe Status Indication

If you use the optional external probe the light at the back of the probe indicates the probe status with the following colors (Figure 53):



Figure 53

Red – Right ear is selected. Probe is out of ear.

Blue – Left ear is selected. Probe is out of ear.

Green – Probe is in the ear and is sealing, test is running.

Yellow – Probe is in the ear and blocked or leaking.

White – The probe has just been attached. Probe status is unknown. The probe status stays white in hand held use if the easyTymp is not monitoring the probe status. If the probe light stays white in any other situation easyTymp might need to be switched off and on again to regain proper probe status.

Flashing color – easyTymp is pausing during a protocol and waits for you to press continue. The color in which the probe light is flashing indicates the probe status like above.

Flashing green to red/blue – easyTymp just finished the protocol.

5.5 Testing

5.5.1 General

Operating the easyTymp is very intuitive. After switching the device on, it will usually start in the **Test** Screen and is ready to test the same protocol as was used last. After disconnecting easyTymp from a PC it will start in the Select Protocol screen and the desired protocol should be selected.

The battery status bar will show the current battery power status. If the battery is empty, you will be warned, the measurement will be stopped and all recorded data will be stored. If this occurs shut down the device and change the battery to continue testing. The measurement data will be recovered when you start up again, so the measurement can continue without restarting the test.

NOTE: If a white screen appears and the easyTymp does not proceed with the next screen, the battery is almost empty. Please change the battery to proceed.

The following paragraphs describe the precise operation of the different screens you will observe during the use of easyTymp.

5.5.2 Test

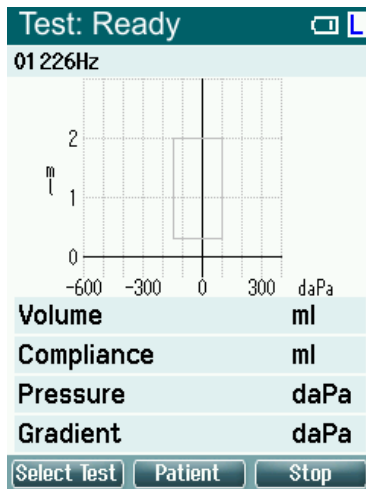







Figure 54

Usually, the easyTymp starts with the **Test** screen. When deleting or saving data after a measurement, you will also return to this screen (Figure 54).

The graphics of the ongoing test will also be displayed. The box indicates the normative area where the peak of the tympanogram is expected to fall. The measured curve will be directly shown in the graphic while the measurement is being taken. Below the graphic the measured values (**Volume**, **Pressure**, **Compliance** and **Gradient**) are shown following the measurement.

Test: Ready The header shows the status of the probe. It might show **Ready**, **In Ear**, **Leaking** or **Blocked**. When **Connected** is displayed, the device is connected to a cradle or directly to the PC.



- In the upper right corner the battery status is indicated . When the easyTymp is placed in the cradle, it will charge the battery and a flashing battery icon will be shown.
- In the upper right corner an icon indicates if the easyTymp is testing the left ear  or right ear .
- In the upper right corner a printer icon  indicates the easyTymp is connect to the wireless printer.

NOTE: After turning on the device and the printer it can take up to 30 seconds until the printer  icon is shown.

- **03 Tymp 226Hz + Auto Reflex** When entering the **Test** screen, the second line shows the name of the protocol which is in use. As soon as the easyTymp detects that the probe is in the ear, the second line will show which test of the protocol is running.

Operating from this screen:

Putting the probe in the ear and obtaining a seal will automatically start the test.

- **Select Test**: The top left button will bring you to the **Select Test** screen where you can select a different test protocol.
- **Patient**: The top middle button will bring you to the **View Patients** screen where patient data can be viewed and earlier sessions can be reviewed and/or printed. This function is only displayed if the patient management is activated.
- **Stop**: The top right button, when the measurement is stopped the top buttons will change to give the option to print, save or delete and **Done!** will appear in the upper left hand corner of the screen.
-   arrows will select respectively right or left ear for testing.
- If data on one or both ears is still available, the up and down buttons will bring you back to the **Done!** screen and allow you scroll through the measurement results.

If a protocol includes an instruction message, pressing the Contra Probe button results in continuing the protocol, no matter what the probe status indicates.

5.5.3 Select Test Screen



Also, check-out our training videos:

MAICO Training I easyTym | 1/13 Set up - YouTube

<https://www.youtube.com/watch?v=S5nZw5J959k>



Also, check-out our training videos:

MAICO Training I easyTym | 3/13 Tympanometry - YouTube

<https://www.youtube.com/watch?v=LqIT1jS8mIY>



To change the selected protocol, first highlight the protocol and then press **Select**. The following measurements are available in the easyTym standard version with international protocols (Figure 55):

01 Tymp 226 Hz

03 Tymp 226 Hz + Auto Reflex

04 Tymp 226 Hz + Reflex 90dB

NOTE: Protocol list is based on version and licensing. Unlicensed protocols are ghosted.

Figure 55

Operating from this screen:

- **easylymp** takes you to the **Setup** screen.
- **Select** selects the highlighted protocol and returns to the **Test** screen.
- **▲▼** buttons allow scrolling up or down to select one protocol.
- **◀▶** buttons will bring you to the top or bottom of the protocol list respectively.

5.5.4 Done!



Also, check-out our training videos:

MAICO Training I easyTymp | 4/13 Tympanometry - Result - YouTube

<https://www.youtube.com/watch?v=h-QUYhuBCbA>

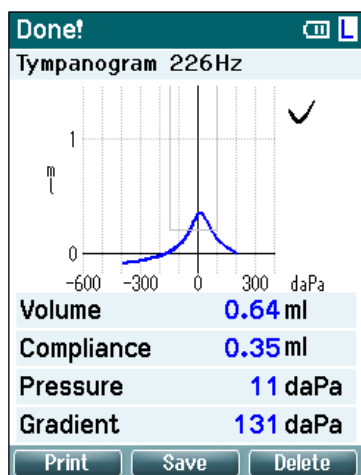


Figure 56

easyTymp will automatically go to the **Done!** screen when it has finished testing (Figure 56).

From here, measurements of both ears can be reviewed, printed and/or saved. To start a new measurement in the Test screen, delete the current test ears result or switch ears. Only one result per ear is saved for review, printing or transferring to a PC.

Operating from this screen:

- **Print**: Top left button will print the test results of the left and right ear. The printer must be on and a connection to the printer prior to starting the test. Printer icon displays in the top right corner of the screen when connected.
- **Save**: Top middle button will save the measurement of both ears.
- **Delete**: Top right button will present a popup message saying "Delete current or both ears?" the top left button will cancel the process. The top middle button will delete the data of the currently selected ear and bring you back to the **Test** screen. The top right button will delete data for both ears and bring you back to the **Test** screen.
- buttons will select respectively right or left ear for testing and bring you back to the **Test** screen. The existing data of the selected ear will only be deleted after the probe detects that it is in the ear with a proper seal.
- buttons make you scroll through the different test results. When viewing the first or last test of an ear, pressing up or down respectively will bring you to the test results of the other ear.

5.5.5 Advanced Testing: easyTymp Plus and Pro Version



Also, check-out our training videos:

MAICO Training I easyTymp | 5/13 Acoustic Reflexes - YouTube

<https://www.youtube.com/watch?v=lnXZK-c6PhU>



Also, check-out our training videos:

MAICO Training I easyTymp | 6/13 Acoustic Reflexes - Result - YouTube

<https://www.youtube.com/watch?v=NlewOhcb-oQ>

Acoustic Reflex Testing (Ipsi and Contra)

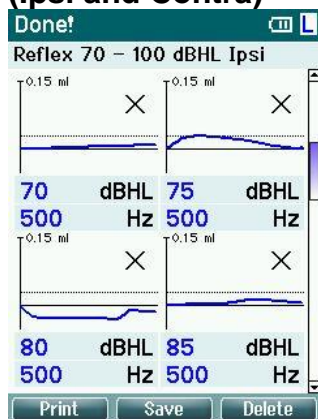


Figure 57

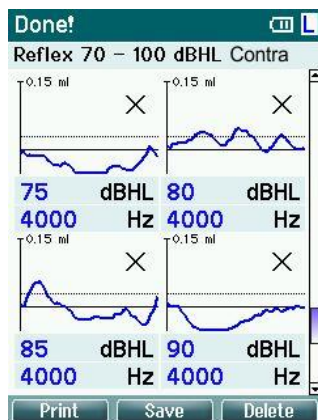


Figure 58

Before performing **ipsilateral** (Figure 57) and **contralateral reflex** (Figure 58) testing **Tympanometry** will be performed.

NOTE: Deflection of reflexes can be positive or negative and is selected within the setup menu.

5.5.6 Advanced Testing: easyTym Pro Version



Also, check-out our training videos:

MAICO Training I easyTym | 7/13 Reflex Decay - YouTube

https://www.youtube.com/watch?v=yt_oXj4ywxE




Also, check-out our training videos:

MAICO Training I easyTym | 8/13 Reflex Decay - Results - YouTube

<https://www.youtube.com/watch?v=32l70jRGpq8>

Acoustic Reflex Decay

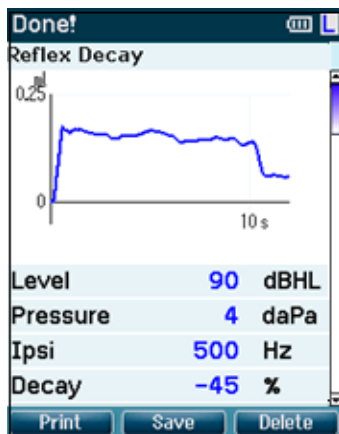

Ipsilateral and **Contralateral Reflex Decay** testing can be performed (Figure 59).

Figure 59



Also, check-out our training videos:

MAICO Training I easyTym | 9/13 ETF - General - YouTube

https://www.youtube.com/watch?v=CPo_kzNDYg8



Also, check-out our training videos:

MAICO Training I easyTym | 10/13 ETF - Intact - YouTube

<https://www.youtube.com/watch?v=rn-MAft245E>



Also, check-out our training videos:

MAICO Training I easyTym | 11/13 ETF - Perforated - YouTube

<https://www.youtube.com/watch?v=p864JgXMTGU>

ETF Intact

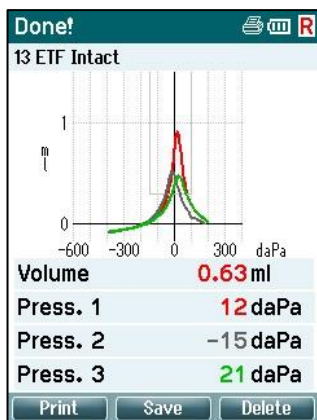


Figure 60

Instructions for testing are displayed at the top of the screen. (Figure 60).

- (1) Red or Blue: represents test ear.
- (2) Grey: represents "Swallow".
- (3) Green: represents "Valsalvation".

ETF Perforated



Figure 61

Instruct the patient to swallow.


Measurement of changing pressure indicates status of *Eustachian tube* (Figure 61).

5.5.7 easyTym Plus and Pro Version: Contra Probe Button

The Contra Probe button will change ears as long as the probe detects it is not in the ear.

When the probe is in an ear it will interrupt the testing and bring you to the **Done!** Screen, and from there also back to the Test screen with a second press of the button. If a protocol includes an instruction message, pressing the Contra Probe button results in continuing the protocol, no matter what the probe status.

5.5.8 Select Patient & Save

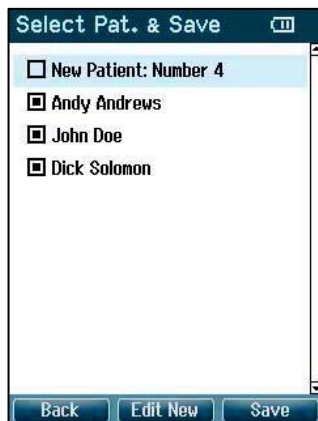





The **Select Patient & Save** screen is accessible once a measurement is completed and **Save** is selected from the test screen. Results can either be saved to an existing patient or to a new patient (Figure 62). New patient will always get the name "New Patient: Number #", where # is always the next available number.


When saving results to a patient, the patient management function must be **On** in the settings (see section 5.6.8).

Figure 62

Operating from this screen:

- **Back** will bring you back to the **Done!** screen without saving and without deleting data.
- **Edit New** opens a screen for editing new patient details.
- **Save** will save the data to the selected patient. After saving, all data is deleted and easyTymp returns in the **Test** screen, ready for testing.
-   buttons will bring you to the top or bottom of the patient list respectively.
-   buttons scroll up or down as one patient's information is viewed.



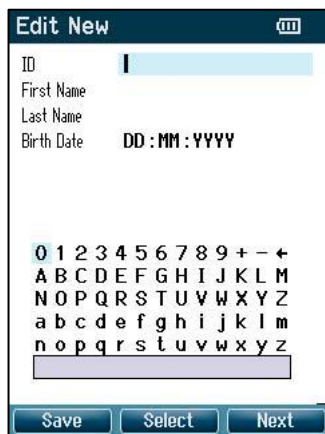

5.5.9 Edit New



With this screen you can input data for a new patient before saving the measurement (Figure 63).

Figure 63

Operating from this screen:

- **Save** saves the patient details and brings you back to Select Patient & Save.
- **Select** will select the highlighted field. Backspace is an arrow in the top right corner. Space is a bar underneath the keyboard
- **Next** will select the next details for editing.
-   arrows buttons will move the selection of the keyboard one character to the left or right.
-   buttons will move the selection of the keyboard one character up or down. When editing the birth date the up and down button will change the numerical value.

5.5.10 View Patients

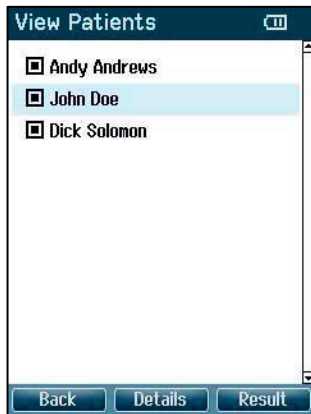






Figure 64

View Patients screen is accessed from the test screen by selecting **Patient** (Figure 64).

When one or more sessions are stored, the square in front of the patient's name is filled. If a session is not stored yet, this square will be empty.

Operating from this screen:

- **Back** brings you back to the **Test** screen.
- **Details** brings you to the **View Details** screen where the data of the selected patient is shown.
- **Result** will bring you to the **View Results** screen where the available sessions of the selected patient can be reviewed and printed.
-   will bring you to the top or bottom of the patient list respectively.
-   buttons scroll up or down as one patient's information is viewed.

5.5.11 View Details

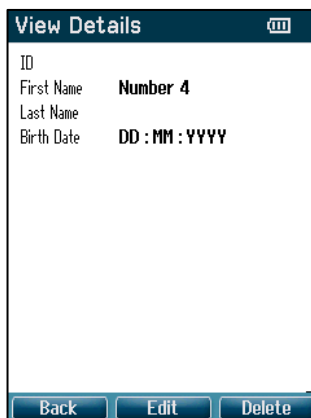


Figure 65

This screen shows demographics of the selected patient (Figure 65).

From here you can either use **Back** to go back to the **View Patients** screen or **Edit** to edit the patient details in the **Edit Details** screen.

Delete button will delete either this patient, or all patients.





5.5.12 Edit Details



Figure 66

This screen shows the patient **ID**, **First Name**, **Last Name**, and **Birth Date** (Figure 66).

Operating from this screen:

- **Back** brings you back to the **View Patients** screen.
- **Select** selects the highlighted character and put it where the cursor is placed. Backspace is an arrow in the top right corner. Space is a bar underneath the keyboard
- **Next** selects the next details for editing.
-   will move the selection of the keyboard one character to the left or right.
-   buttons will move the selection of the keyboard one character up or down. When editing the birth date the up and down button will change the numerical value.

5.5.13 View Results

View Results – select session

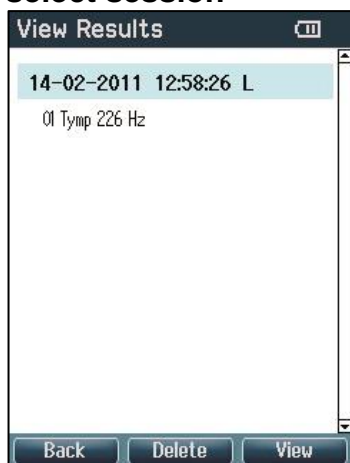






Figure 67

For the selected patient, the screen shows a list of available sessions (Figure 67).

Operating from this screen:

- **Back** brings you back to the **View Patient** screen.
- **Delete** prompts you and ask for confirmation before it deletes the selected session or all sessions.
- **View** shows the selected session in the **View Results** screen (see Figure 39).
-   buttons bring you respectively to the top or bottom of the result list.
-   buttons scroll up or down one session

View Results – show results

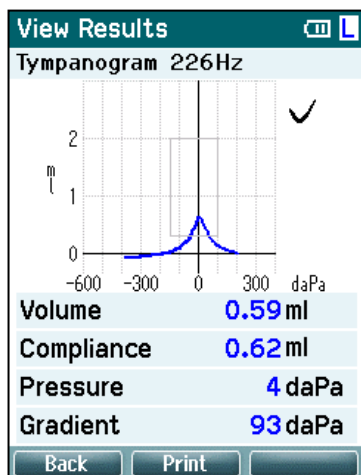






Figure 68

This screen displays the test recordings of the selected session (Figure 68).

Operating from this screen:

- **Back** brings you back to the **View Results** screen.
- **Print** button will print all results which are stored in the selected session.
- The top right button has no function.
-   buttons will show the recordings of the right or left ears respectively, if available.
-   buttons scroll through the different tests which are included in the selected session.

5.6 Setup Menu

5.6.1 Setup

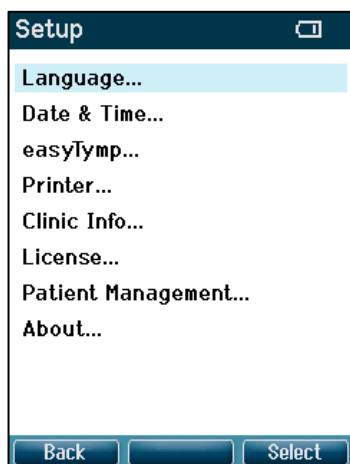






Figure 69

To change the Setup of the easyTymp navigate from **Test** screen to **Select Test** and then to **easyTymp** (Figure 69).

Operating from this screen:

- **Back** brings you back to the **Select test** screen.
- The top middle button has no function.
- **Select** selects the highlighted setting to be viewed.
-   buttons have no function.
-   buttons scroll up and down to the next item.

5.6.2 Setup Language

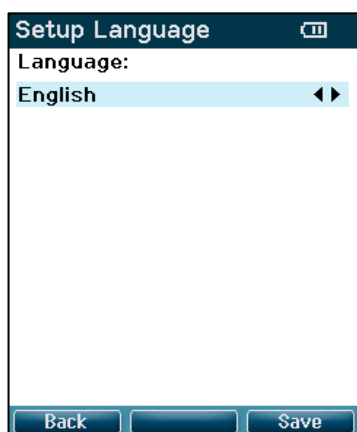




Figure 70

Use right and left arrow keys to adjust language (Figure 70). Available languages are **English**, **Deutsch**, **Español**, **Français**, **Italiano**, **Polski**, **日本語**, **中文**, **русский** and **Svenska**.

5.6.3 Setup Time



Figure 71

  arrow keys will scroll through the options (Figure 71).

  buttons adjust **Date**, **Date format** and **Time**.

5.6.4 Setup easyTymp

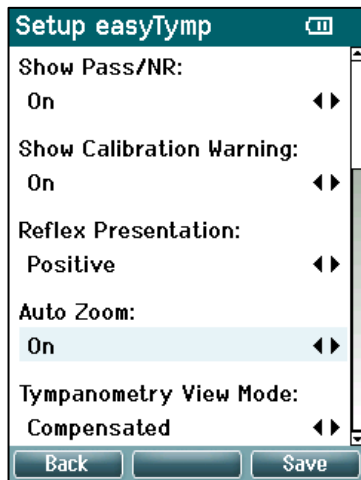


Figure 72

▲▼ will scroll through the options. ◀ ▶ buttons to adjust selection (Figure 72).

The **Power Save** can be set to **Never** or **1, 2, 3, 4** or **5 min**.

The **Power Off** can be set to **Never** or from **1** to **10 min**.

Show Pass/NR: If **On** the test result will display with a **Pass** ✓ / **NR** (No Response) ✗ symbol depending on Normative Values defined internally.

Show Calibration Warning: When **On**, calibration reminder will display on device, when turned on.

Reflex Presentation: **Negative** or **Positive** deflection in the graphs.

Auto zoom: Auto zoom allows the best possible display of the results in the Tympanogram. Otherwise, the scale is fixed to the default display range of the **Tympanometry View Mode**.

Tympanometry View mode: Set the for viewing the Tympanogram:

- **Compensated:** compensates the Tympanogram according to the measured ear canal volume (default display range: 3 ml/mmho).
- **Uncompensated:** shows absolute values (default display range: 6 ml/mmho).

5.6.5 Setup Printer



Figure 73



Figure 74

▲▼ buttons will scroll through the options. Press the ◀ ▶ buttons to adjust selection (Figure 73).

Printing: Can be set to **Wireless printer**, **Cradle printer** or **Disabled**. Selection of the printing type will hide not applicable printing options.

NOTE: **Cradle printer** is selectable for a discontinued configuration where a cradle printer was provided.

Pairing Wireless printer: Press **Search** to start searching for the wireless printer. This process takes about 1 minute.

Select the printer using the ▲▼ buttons and press **Select** to configure the device to the wireless printer provided by MAICO (Figure 74). Select **Save** or **Back** to exit the Setup Printer screen.

NOTE: The printer must be turned on by pressing the **power button** ① before starting the pairing process.

Reflex Presentation: Choose between **Table** or **Graph** by pressing the ◀ ▶ buttons (Figure 73).

5.6.6 Setup Clinic Info

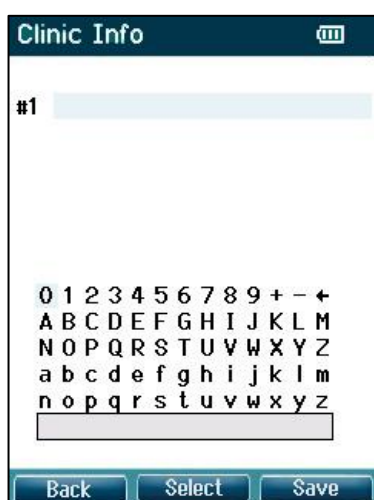


Figure 75

To enter the clinic information to display on the printout, enter the **Setup** Menu and select **Clinic Info** from the list. Once within the **Clinic Info** screen, select **Edit**.

Use **Up**, **Down**, **Right** and **Left** arrow keys to move the cursor over the keyboard (Figure 75).

Select to select the highlighted character. Backspace is an arrow in the top right corner. Space is a bar underneath the keyboard.

Next to select the next details for editing.

Save to save and return to the **Setup** screen.

5.6.7 Setup License



Figure 76

Option to buy licenses to unlock further measurements (Figure 76):

Edit: The middle button starts the edit mode to insert the License Key.

NOTE: License should be modified by a licensed distributor only. If you accidentally enter the edit mode, press the **Back** button to return.

5.6.8 Setup Patient Management



Figure 77

Turns the internal patient data management **On** or **Off** (Figure 77).

NOTE: When changing from **On** to **Off**, all measured and/or stored data will be deleted.

5.6.9 About

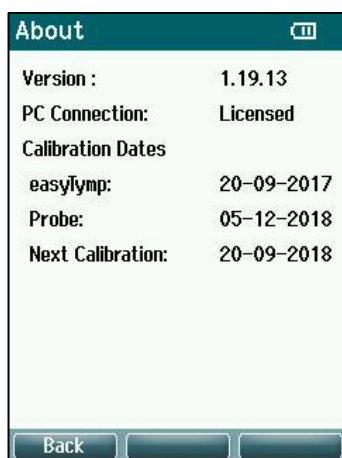


Figure 78

About displays the firmware version and calibration dates (Figure 78).

5.7 Managing Test Results

5.7.1 General



Also, check-out our training videos:

MAICO Training I easyTymp | 12/13 Managing Test Results - YouTube


<https://www.youtube.com/watch?v=9F8bUtDobg0>

Dependent on the configuration there are different possibilities to manage test results. It is possible to delete test results, print the session directly with the thermal printer or transfer the data to a PC for further processing.

5.7.2 Deleting Test Results

The procedure of deleting test results depends on whether patient management is active or not.



Deleting Test Results Directly After Testing

Deleting a measurement is possible by pressing the  button directly after having finished a measurement and the **Done!** screen is shown. It is possible to delete measurements of one or both ears. See section 5.5.4 for more information.

NOTE: Making a measurement on the same ear without having saved the previous measurement will overwrite the previous test result.

Deleting Test Results in the Patient Management

Using the patient management it is possible to delete either single or all results of a patient or one or all patients including test results. See section 5.5.13 on how to delete single or all test results of a patient. See section 5.5.11 on how to delete a single or all patients including test results.

NOTE: If the management system is getting activated or deactivated, a message box warns that all measurement data will be deleted. Press  to change the setting and delete the data or  to keep the settings. See also section 5.6.8.

5.7.3 Printing Test Results with the Thermal Printer

Print directly from the **Done!** screen (see section 5.5.4) or after viewing results via patient management (see section 5.5.13).

5.7.4 Data Transfer Between easyTymp and MAICO Sessions

NOTE: For transfer data between easyTymp and MAICO Sessions it is necessary to activate the license for PC connection which can be additionally purchased.

With easyTymp Patient Management enabled (only with OtoAccess® Database or Noah)

To transfer data, do the following:

- Complete the measurement and save it on the device.
- Connect the easyTymp to the computer using the USB cable.
- Upload patients or download sessions (see MAICO Sessions Software Operation Manual for more information).

With easyTymp Patient Management Disabled

Disable patient management in easyTymp. See section 5.6.8 for more information.

Proceed as follows to transfer data:

- Complete the measurement.
- Connect the easyTymp to the computer using the USB cable.
- The data transfer starts automatically (see MAICO Sessions Software Operation Manual for more information).

NOTE: The easyTymp cannot make a measurement if it is connected to the running Sessions software.

6 Technical Data

This section offers you important information about

- the easyTymp hardware specifications
- connections
- the pin assignment
- impedance calibration values
- electromagnetic compatibility (EMC)
- electrical safety, EMC and associated Standards

6.1 easyTymp Hardware



The easyTymp is an active, diagnostic medical product according to the class IIa of the Medical Device Regulation (EU) 2017/745.

General Information About Specifications


The performance and specifications of the device can only be guaranteed if it is subject to technical maintenance at least once every 12 months.

MAICO Diagnostics puts diagrams and service manuals at the disposal of authorized service companies.

STANDARDS

Medical CE-mark	Yes
Safety Standards	IEC 60601-1:2005+A1:2012/ ANSI/AAMI ES60601-1: 2005/ A2:2010/ CAN/CSA-C22.2 No. 60601-1:14 Class II, Type B Applied Parts
EMC Standards	IEC 60601-1-2:2014
Tympanometer Standards	IEC 60645-5, Type 2 ANSI S3.39, Type 2
	Normative Box: Appendix

DEVICE SPECIFICATIONS

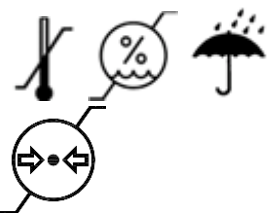Environment Conditions: 	Operation	+15 °C to +35 °C / +59 °F to +95 °F Humidity: 30 % to 90 %, non-condensing Air pressure 98 kPa to 104 kPa ¹ Maximum altitude: 2000 m / 6561 ft above sea level
	Storage	0 °C to +50 °C / +32 °F to +122 °F Humidity: 10 % to 95 %, non-condensing
	Transport	-20 °C to +50 °C / -4 °F to +122 °F Humidity: 10 % to 95 %, non-condensing
Power supply, UES18LCP-050250SPA	Consumption:	12.5 W
	Input:	100 - 240 VAC ± 10 %, 50/60 Hz, 500 mA
	Output:	5 VDC/2.5 A
	Dimensions	Max. 88 mm x 30 mm x 57 mm 3.46" x 1.18" x 2.24"
Battery Type	NP120 Li-Ion	3.7 V 1700 mAh
Dimension and weight:	Dimension	80 mm x 300 mm x 70 mm 3.15" x 11.81" x 2.76"
	Weight	427 g / 1 lb
Display:	Display size:	2.2" diagonal
	Resolution:	240 x 320
PC connection:	USB:	Input/output for computer communication.
Memory:		Stores test results for up to 499 patients. The easyTymp hand-held unit is delivered with an 8 GB memory card
Mode of operation	Continuous	
Dimensions Probe	34 mm	
Dimensions External Probe:	350 mm (cable)	
Dimensions Contra Probe:	1400 mm (cable)	
Warm-up time:	approx. 1 minute	

¹ Environment conditions during operating according IEC 60645-1

NOTE: Reference equivalent threshold sound pressure levels may differ significantly with ambient pressures outside the above range. Therefore recalibration around the normal ambient pressure at the site of the user should be undertaken in those circumstances where the calibration site and the user site do not share similar ambient conditions.

IMPEDANCE MEASURING SYSTEM

Probe tone:	Frequency:	226 Hz, 1000 Hz
	Level:	85 dB SPL at 226 Hz, 69 dB SPL at 1000 Hz with AGC, assuring constant level at different ear canal volumes.
Air pressure:	Control:	Automatic.
	Indicator:	Measured value is displayed on the graphical display.
	Pressure change rate (international protocols):	Speed at compliance peak: Automatic: 600/200 daPa/s
	Pressure change rate (Swedish protocols):	See section 6.6.
	Range:	-400 daPa to +200 daPa.
	Pressure limitation:	-750 daPa and +550 daPa.
Compliance:	Range:	0.1 ml to 8.0 ml at 226 Hz probe tone (Ear volume: 0.1 ml to 8.0 ml) and 0.1 mmho to 15 mmho at 1000 Hz probe tone.
Test types:	Tympanometry	Automatic.
Accuracy:	Compliance:	$\pm 5\%$ or ± 10 daPa, whichever is greater
	Pressure:	$\pm 5\%$ or ± 0.1 ml, whichever is greater
Precision:	Pressure:	1 daPa
	Compliance:	0.01 ml
Indicators:	Graphical display	Compliance is indicated as ml for 226 Hz and as mmho for 1000 Hz and pressure as daPa. Stimulus level is indicated as dB HL. View modes: Compensated/Uncompensated ETF Intact: Compensated view mode only
Memory:	Tympanometry:	1 curve per ear, per Tympanometry test. And theoretically an infinite number of tests per protocol.

ACOUSTIC REFLEX FUNCTIONS

Stimulus:	Type:	Ipsilateral and Contralateral: <ul style="list-style-type: none"> Pure tone (500, 1000, 2000, 4000 Hz) Broadband noise (BB)
	Level:	Automatic pure tone: International: 70-100 dB HL in 5 dB steps Swedish: 70-95 dB HL in 5 dB steps Fixed pure tone: International: 90 dB HL Swedish: 85 dB HL International: Fixed BB: 80 dB HL
Outputs:	Ipsi earphone:	Probe earphone incorporated in the probe system for reflex measurements.
	Contra earphone:	CIR insert earphones, DD45C, IP30 for reflex measurements.
	Air:	Connection of the air system to the probe.
Transducers – Headband tension:	DD45 C:	Headband Static Force 4.5 N ± 0.5 N
	Test types:	Ipsi- and contralateral <ul style="list-style-type: none"> Single intensities Reflex auto search

REFLEX DECAY FUNCTIONS

Test method	Ipsi- and contralateral	
Test signals:	Pure Tones:	500 Hz, 1000 Hz, 2000 Hz, 4000 Hz each with ± 3 %
	Noise:	Broadband
Test level:		10 dB above reflex threshold
	Ipsi- and contralateral:	80 dB HL to maximum level of transducer
Control Acoustic Reflexes:	Automatic	Automatic reflexes: Single reflex auto search
Tone presentation:	10 s	
Compliance Range:	-0.05 ml to 0.25 ml	
Graphical display:	y-axis:	Compliance in ml
	x-axis:	Time in s
		Level in dB HL
Ipsi earphone:	Earphone integrated in probe	

ETF – INTACT

Same specification as Tympanometry, 226 Hz probe tone only.

ETF – PERFORATED

Test signals:	Pure tone: 226 Hz with $\pm 1 \%$
Test level:	85 dB SPL ± 1.5 dB measured in an IEC 60318-5 Acoustic coupler. The level is constant for all volumes in the measurement range.
Control Tympanometry:	Automatic
Time range:	0 s to 30 s (settings)
Pressure range:	0 daPa to 400 daPa
Accuracy:	Pressure: $\pm 5 \%$ or ± 0.1 ml, whichever is greater
Precision:	Pressure: 1 daPa
Graphical display:	x-axis: Time in s y-axis: Pressure in daPa

CALIBRATION PROPERTIES

Calibrated transducers:	Probe system:	Ipsilateral and Contralateral Earphone: is integrated in the probe system. Probe frequency transmitter and receiver and pressure transducer is integrated in the probe system.
	General	Generally the device is made and calibrated to be within and better than the tolerances required in the specified standards:
Accuracy:	Reflex frequencies:	$\pm 3 \%$
	Ipsilateral reflex tone levels:	± 3 dB for 500 Hz to 4000 Hz
	Contralateral Reflex Tone Levels:	± 3 dB for 500 Hz to 4000 Hz
	Pressure measurement:	$\pm 5 \%$ or ± 10 daPa, whichever is greater
	Compliance measurement:	$\pm 5 \%$ or ± 0.1 ml, whichever is greater

IMPEDANCE CALIBRATION PROPERTIES

Probe tone	Frequencies:	226 Hz \pm 1 %, 1000 Hz \pm 1 %
	Level:	85 dB SPL \pm 1.5 dB measured in an IEC 60318-5 Acoustic coupler. The level is constant for all volumes in the measurement range.
	On-Off ratio:	> 70 dB
	SNR ratio:	> 70 dB
	A-Weighted noise in off condition:	< 25 dB
	Rise/fall times:	> 5 ms
	Distortion:	Max. 1 % THD
Compliance	Range:	0.1 ml to 8.0 ml
	Temperature dependence:	-0.003 ml/°C
	Pressure dependence:	-0.00020 ml/daPa
	Reflex sensitivity:	0.001 ml is the lowest detectable volume change
	Temporal reflex characteristics:	Initial latency = 35 ms (\pm 5 ms) Rise time = 45 ms (\pm 5 ms) Terminal latency = 35 ms (\pm 5 ms) Fall time = 45 ms (\pm 5 ms) Overshoot = max. 1 % Undershoot = max. 1 % ON and OFF time = 750 ms
Pressure	Range:	-400 daPa to +200 daPa
	Safety limits:	-750 daPa and +550 daPa, \pm 50 daPa

REFLEX CALIBRATION STANDARDS AND SPECTRAL PROPERTIES

General	Specifications for stimulus signals are made to follow IEC 60645-5/ANSI S3.39.	
Ipsi- and Contra-lateral Earphone	Pure tone:	\pm 3 dB for 500 Hz to 4000 Hz
	Broadband noise (BB):	MAICO Standard Values
	Spectral properties:	As "Broadband noise" specified in IEC 60645-5, but with 500 Hz as lower cut-off frequency.
	General about levels:	The actual sound pressure level at the eardrum will depend on the volume of the ear.

The risk of artifacts at higher stimulus levels in reflex measurements are minor and will not activate the reflex detection system.

CRADLE

Power supply, UES24LCP-240100SPA	Consumption	24 W
	Input	100 - 240 VAC \pm 10 %, 50/60 Hz, 500 mA
	Output	24 VDC/1 A
	Dimensions	Max. 88 mm x 30 mm x 57 mm 3.46" x 1.18" x 2.24"

PRINTER MPT-II

Print mode	Thermal line dot print Printing width: 48 mm (1.9 in) Resolution: 8 dots/mm (203 dots per in (dpi)) Dots per line: 384 dots
Thermal paper	Paper width = 56mm +/- 1 mm (2.2 in +/- 0.04 in) max. 40 mm (1.6 in) diameter
Battery pack	2-cell Li-Ion battery pack 7.4 V-1500 mAh
Power supply / charger	12 V/1.25 A UES18LCP-120125SPA Maximum current consumption 0.5 A
Size	02 mm x 75 mm x 45 mm (4.02 in x 2.95 in x 1.77 in)
Weight	Weight: 205 g including battery, without paper





PRINTER HM-E200

Thermal printer	Type	HM-E200
	Connection	Wireless
	Battery	3.7 V rechargeable Li-polymer battery, 1300 mAh
	Weight	234 g / 8.3 oz
	Paper	Thermal paper
	Paper size	57.5 mm \pm 0.5 mm (width)
	Printing time	<5 seconds per test result
Power supply	Type	UES12LCP-050160SPA
	Input	100 to 240 V AC, 50/60 Hz, 0.5 A
	Output	5.0V DC, 1.6A MAX
	Safety	IEC 60601-1, Class II

6.2 Connections and Pin Assignment

easyTymp Device

Table 6 Pin Assignment easyTymp

OUTPUTS	CONNECTOR TYPE	PIN ASSIGNMENT	
USB mini 	USB Type „B“	USB port for communication	
Probe connector 	Probe connector, 12-pole	CH1 out CH1 GND DGND GND Microphone Microphone – input / Analog balanced in Microphone + input / Analog balanced in Power supply +3/+5V CH2 out CH2 GND I2C CLK I2C DATA I2C Interrupt	
Data connector 	Data connector, 30-pole	STAT2_HH Cradle+5V Cradle+5V Cradle+5V DGND DGND DGND USB+5V USBDP USBDN Temp.bat PRT_BUSY IC33-NO2 PRT_ACK/U2RX TP116 IC33-NO1	TRIGGER-OUT2 RESET# TRIGGER-IN2 KEY_DOWN / POWER ON Vbat PRT_ACK/U2RX Strobe# DATA0 DATA1 DATA2 DATA3 DATA4 DATA5 DATA6 DATA7
Contra Phone 	3.5 mm Mono	Ground	Signal

Cradle







 



Figure 79

Table 7 Pin Assignment Cradle

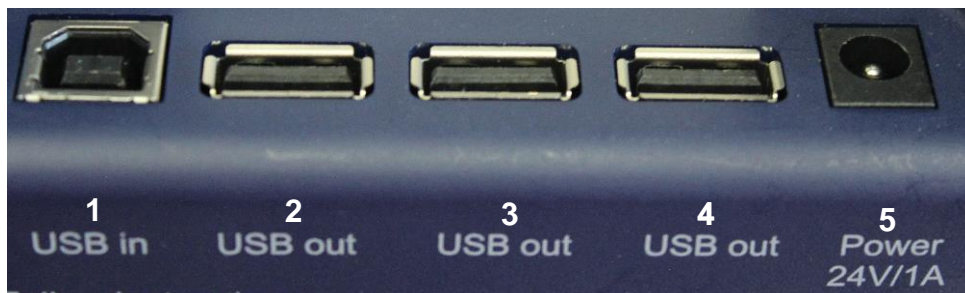NO.	CONNECTOR TYPE	PIN ASSIGNMENT		
1	USB in	USB 2.0  1 2 4 3	1. +5 VDC 2. Data - 3. Data + 4. Ground	
2 to 4	USB out	USB 2.0   4 3 2 1	1. +5 VDC 2. Data - 3. Data + 4. Ground	
5	Mains	 DC socket 24 V/3 A		
-	Data connector 	Data connector, 30-pole	STAT2_HH Cradle+5V Cradle+5V Cradle+5V DGND DGND DGND USB+5V USBDP USBDN Temp.bat PRT_BUSY IC33-NO2 PRT_ACK/U2RX TP116 IC33-NO1	TRIGGER-OUT2 RESET# TRIGGER-IN2 KEY_DOWN / POWER ON Vbat PRT_ACK/U2RX Strobe# DATA0 DATA1 DATA2 DATA3 DATA4 DATA5 DATA6 DATA7
-	Charging connector 	 - pole ground + pole		

6.3 Reference values for stimulus calibration

Table 8

COUPLER TYPES USED BY CALIBRATION	
IOW Probe (probe system):	Calibrated using a IEC 60380-5 (2cc) Acoustic coupler made in accordance to MAICO Standard Values
CIR:	Calibrated using a IEC 60380-5 (2cc) Acoustic coupler made in accordance to ISO 389-2:1994
DD45C:	Calibrated using a IEC 60318-3 (6cc) Acoustic coupler made in accordance to MAICO Standard Values

Table 9 Reference Values for Stimulus Calibration

REFERENCE VALUES FOR STIMULUS CALIBRATION				
Fre- quency [Hz]	Reference equivalent threshold sound pressure level [RETSPL, dB re. 20 µPa]			
	CIR ISO 389-2	DD45 C MAICO Standard Values	IOW Probe MAICO Standard Values	IP30 ISO 389-2
500	5.5	13.0*	9.5*	5.5
1000	0.0	6.0*	6.5*	0.0
2000	3.0	8.0*	12.0*	3.0
4000	5.5	9.0*	3.5*	5.5
BB	-5.0	-8.0*	-5.0*	0.0

*All values marked with at star are MAICO Standard Values.

Table 10 Frequencies and Intensity Ranges for Impedance

FREQUENCIES AND MAXIMUM VALUES FOR IMPEDANCE				
Center Fre- quency [Hz]	Intensities [dB HL]			
	CIR	DD45 C	IOW Probe	IP30
	Tone	Tone	Tone	Tone
500	110	115	100	115
1000	115	120	105	120
2000	115	115	105	120
4000	110	115	100	120
BB	120	120	105	120

6.4 Electromagnetic Compatibility (EMC)

ESSENTIAL PERFORMANCE for this device is defined by the manufacturer as:

- This device does not have an ESSENTIAL PERFORMANCE
- Absence or loss of ESSENTIAL PERFORMANCE cannot lead to any unacceptable immediate risk. Final diagnosis shall always be based on clinical knowledge.

This device is in compliance with IEC 60601-1-2:2014, emission class B group 1

NOTICE: There are no deviations from the collateral standard and allowances uses.

NOTICE: All necessary instruction for maintaining compliance with regard to EMC can be found in the general maintenance section in this instruction. No further steps required.

To ensure compliance with the EMC requirements as specified in IEC 60601-1-2, it is essential to use only the accessories listed in the following table. Conformance to the EMC requirements as specified in IEC 60601-1-2 is ensured if the cable types and cable lengths are as specified.

Item	Manufacturer	Model	Cable	
			Length [meter]	Screened [Y/N]
Handheld test setup (Wireless active) :				
Probe	MAICO	Clinical Extension Cable	0.4	Combined
Probe with Extension Cable			1.7	Combined
Contra Probe	Radioear	IP30	0.35	Y
Printer	Sanibel	MPT II	-	-
Printer	Xiamen PRT technology	HM-E200	-	-
PSU	Fuhua	UES18LCP-050250SPA	1.5	N
Cradle test setup (Wireless off) :				
Probe	MAICO	Clinical Extension Cable	0.4	Combined
Probe with Extension Cable			1.7	Combined
Contra Probe	Radioear	IP30	0.35	Y
Cradle	Maico	Cradle eartip box	-	-
PSU	Fuhua	UES24LCP-240100SPA	1.5	N
USB cable A-B	Sanibel	8011241	1.8	Y

Portable and mobile RF communications equipment can affect the easyTymp. Install and operate the device according to the EMC information presented in this chapter.

The device has been tested for EMC emissions and immunity as a standalone device. Do not use the device adjacent to or stacked with other electronic equipment. If adjacent or stacked use is necessary, the user should verify normal operation in the configuration.


The use of accessories, transducers and cables other than delivered from MAICO, with the exception of servicing parts sold by MAICO as replacement parts for internal components, may result in increased emissions or decreased immunity of the device.

Anyone connecting additional equipment is responsible for making sure the system complies with the IEC 60601-1-2 standard.

Guidance and manufacturer's declaration - electromagnetic emissions		
The <i>easyTymp</i> is intended for use in the electromagnetic environment specified below. The customer or the user of the <i>easyTymp</i> should assure that it is used in such an environment.		
Emissions Test	Compliance	Electromagnetic environment - guidance
RF emissions CISPR 11	Group 1	The <i>easyTymp</i> uses RF energy only for its internal function. Therefore, its RF emissions are very low and are not likely to cause any interference in nearby electronic equipment. The <i>easyTymp</i> is suitable for use in all commercial, industrial, business, and residential environments.
RF emissions CISPR 11	Class B	
Harmonic emissions IEC 61000-3-2	Not Applicable	
Voltage fluctuations / flicker emissions IEC 61000-3-3	Not applicable	

Recommended separation distances between portable and mobile RF communications equipment and the <i>easyTymp</i> .			
The <i>easyTymp</i> is intended for use in an electromagnetic environment in which radiated RF disturbances are controlled. The customer or the user of the <i>easyTymp</i> can help prevent electromagnetic interferences by maintaining a minimum distance between portable and mobile RF communications equipment (transmitters) and the <i>easyTymp</i> as recommended below, according to the maximum output power of the communications equipment.			
Rated Maximum output power of transmitter [W]	Separation distance according to frequency of transmitter [m]		
	150 kHz to 80 MHz $d = 1.17\sqrt{P}$	80 MHz to 800 MHz $d = 1.17\sqrt{P}$	800 MHz to 2.7 GHz $d = 2.23\sqrt{P}$
0.01	0.12	0.12	0.23
0.1	0.37	0.37	0.74
1	1.17	1.17	2.33
10	3.70	3.70	7.37
100	11.70	11.70	23.30
For transmitters rated at a maximum output power not listed above, the recommended separation distance d in meters (m) can be estimated using the equation applicable to the frequency of the transmitter, where P is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer. Note 1 At 80 MHz and 800 MHz, the higher frequency range applies. Note 2 These guidelines may not apply to all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.			

Guidance and Manufacturer's Declaration - Electromagnetic Immunity			
The <i>easyTymp</i> is intended for use in the electromagnetic environment specified below. The customer or the user of the <i>easyTymp</i> should assure that it is used in such an environment.			
Immunity Test	IEC 60601 Test level	Compliance	Electromagnetic environment - guidance
Electrostatic Discharge (ESD) IEC 61000-4-2	+8 kV contact +15 kV air	+8 kV contact +15 kV air	Floors should be wood, concrete or ceramic tile. If floors are covered with synthetic material, the relative humidity should be greater than 30%.
Electrical fast transient/burst IEC61000-4-4	+2 kV for power supply lines +1 kV for input/output lines	Not applicable +1 kV for input/output lines	Mains power quality should be that of a typical commercial or residential environment.
Surge IEC 61000-4-5	+1 kV differential mode +2 kV common mode	Not applicable	Mains power quality should be that of a typical commercial or residential environment.
Voltage dips, short interruptions and voltage variations on power supply lines IEC 61000-4-11	< 5% UT (>95% dip in UT) for 0.5 cycle 40% UT (60% dip in UT) for 5 cycles 70% UT (30% dip in UT) for 25 cycles <5% UT (>95% dip in UT) for 5 sec	Not applicable	Mains power quality should be that of a typical commercial or residential environment. If the user of the <i>easyTymp</i> requires continued operation during power mains interruptions, it is recommended that the <i>easyTymp</i> be powered from an uninterruptible power supply or its battery.
Power frequency (50/60 Hz) IEC 61000-4-8	30 A/m	30 A/m	Power frequency magnetic fields should be at levels characteristic of a typical location in a typical commercial or residential environment.
Note: UT is the A.C. mains voltage prior to application of the test level.			

Guidance and manufacturer's declaration — electromagnetic immunity			
The easyTymp is intended for use in the electromagnetic environment specified below. The customer or the user of the easyTymp should assure that it is used in such an environment.			
Immunity test	IEC / EN 60601 test level	Compliance level	Electromagnetic environment – guidance
Conducted RF IEC / EN 61000-4-6	3 Vrms 150kHz to 80 MHz	3 Vrms	<p>Portable and mobile RF communications equipment should be used no closer to any parts of the easyTymp, including cables, than the recommended separation distance calculated from the equation applicable to the frequency of the transmitter.</p> <p>Recommended separation distance:</p> $d = 1,2\sqrt{P}$ <p>$d = 1,2\sqrt{P}$ 80 MHz to 800 MHz</p> $d = 2,3\sqrt{P}$ 800 MHz to 2,7 GHz <p>Where P is the maximum output power rating of the transmitter in watts (W) according to the transmitter manufacturer and d is the recommended separation distance in meters (m).</p> <p>Field strengths from fixed RF transmitters, as determined by an electromagnetic site survey,^a should be less than the compliance level in each frequency range.^b</p> <p>Interference may occur in the vicinity of equipment marked with the following symbol:</p> 
<p>NOTE1 At 80 MHz and 800 MHz, the higher frequency range applies</p> <p>NOTE 2 These guidelines may not apply in all situations. Electromagnetic propagation is affected by absorption and reflection from structures, objects and people.</p> <p>^a) Field strengths from fixed transmitters, such as base stations for radio (cellular/cordless) telephones and land mobile radios, amateur radio, AM and FM radio broadcast and TV broadcast cannot be predicted theoretically with accuracy. To assess the electromagnetic environment due to fixed RF transmitters, an electromagnetic site survey should be considered. If the measured field strength in the location in which the easyTymp is used exceeds the applicable RF compliance level above, the easyTymp should be observed to verify normal operation. If abnormal performance is observed, additional measures may be necessary, such as reorienting or relocating the easyTymp.</p> <p>^b) Over the frequency range 150 kHz to 80 MHz, field strengths should be less than 3 V/m.</p>			

6.5 Electrical Safety, EMC and Associated Standards

1. IEC/EN 60601-1:2012: Medical Electrical Equipment, Part 1 General Requirements for Safety
2. JIS T0601-1:2017: Medical electrical equipment -- Part 1: General requirements for basic safety and essential performance
3. CAN/CSA-C22.2 No. 60601-1:14: Medical electrical equipment - Part 1: General requirements for basic safety and essential performance
4. ANSI/AAMI ES 60601-1: 2005 / A2:2010: Medical Electrical Equipment, Part 1 General Requirements for Safety
5. IEC 62368-1:2018: Audio/video, information and communication technology equipment - Part 1: Safety requirements Information
6. IEC 60601-1-1:2000: General requirements for safety; Collateral standard: Safety requirements for medical electrical systems
7. IEC 60601-1-2:2014: Medical Electrical Equipment - Part 1-2: General Requirements for Basic Safety and Essential Performance - Collateral Standard: Electromagnetic Compatibility - Requirements and tests
8. ISO 14971:2012 - Application of risk management to medical devices
9. General Safety and Performance Requirements of the current REGULATION (EU) 2017/745
10. DIRECTIVE 2011/65/EU on the restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS 2)
11. Directive 2002/96/EC on waste electrical and electronic equipment (WEEE)

6.6 Test Protocols

NOTE: Test protocols are configuration dependent.

International Protocols

01 226Hz	Tympanometry, Frequency: 226 Hz Earside: Ipsilateral
02 1kHz	Tympanometry, Frequency: 1 kHz Earside: Ipsilateral
03 226Hz + Ipsi Reflex Auto	Tympanometry, Frequency: 226 Hz Number of Reflexes tested = 4, Frequencies: 0.5, 1.0, 2.0, 4.0 kHz Intensity Reflex Min (Intensity in dB HL) = 70 Intensity Reflex Max (Intensity in dB HL) = 100 Probe frequency during reflexes: 226 Hz Earside: Ipsilateral
04 226Hz + Ipsi Reflex 90 dB	Tympanometry, Frequency: 226 Hz Number of Reflexes tested = 4, Frequencies: 0.5, 1.0, 2.0, 4.0 kHz Intensity Reflex (Intensity in dB HL) = 90 Probe frequency during reflexes: 226 Hz Earside: Ipsilateral
05 1kHz + Ipsi Reflex Auto	Tympanometry, Frequency: 1 kHz Number of Reflexes tested = 4, Frequencies: 0.5, 1.0, 2.0, 4.0 kHz Intensity Reflex Min (Intensity in dB HL) = 70 Intensity Reflex Max (Intensity in dB HL) = 100 Probe frequency during reflexes: 226 Hz Earside: Ipsilateral
06 1kHz + Ipsi Reflex 80 dB BB	Tympanometry, Frequency: 1 kHz Number of Reflexes tested = 1, Test signal: Broadband noise Intensity Reflex (Intensity in dB HL) = 80 dB Probe frequency during reflexes: 226 Hz Earside: Ipsilateral
07 226Hz + Ipsi-Contra Auto	Tympanometry, Frequency: 226 Hz Number of Reflexes tested = 8, Frequencies: 0.5, 1.0, 2.0, 4.0 kHz Intensity Reflex Min (Intensity in dB HL) = 70 Intensity Reflex Max (Intensity in dB HL) = 100 Probe frequency during reflexes: 226 Hz Earside: Ipsi- and Contralateral

08 226Hz + Ipsi-Contra 90 dB	Tympanometry, Frequency: 226 Hz Number of Reflexes tested = 8, Frequencies: 0.5, 1.0, 2.0, 4.0 kHz Intensity Reflex (Intensity in dB HL) = 90 Probe frequency during reflexes: 226 Hz Earside: Ipsi- and Contralateral
09 1kHz + Ipsi-Contra Auto	Tympanometry, Frequency: 1 kHz Number of Reflexes tested = 8, Frequencies: 0.5, 1.0, 2.0, 4.0 kHz Intensity Reflex Min (Intensity in dB HL) = 70 Intensity Reflex Max (Intensity in dB HL) = 100 Probe frequency during reflexes: 226 Hz Earside: Ipsi- and Contralateral
10 1kHz + Ipsi-Contra 80 dB BB	Tympanometry, Frequency: 1 kHz Number of Reflexes tested = 2, Test signal: 80 Broadband noise Intensity Reflex (Intensity in dB HL) = 80 Probe frequency during reflexes: 226 Hz Earside: Ipsi- and Contralateral
11 Decay Ipsi	Number of Reflexes tested = 4, Frequencies: 0.5, 1.0, 2.0, 4.0 kHz Intensity Reflex Min (Intensity in dB HL) = 70 Intensity Reflex Max (Intensity in dB HL) = 110 Probe frequency during reflexes: 226 Hz Duration of Signal: 10 s Earside: Ipsilateral
12 Decay Contra	Number of Reflexes tested = 4, Frequencies: 0.5, 1.0, 2.0, 4.0 kHz Intensity Reflex Min (Intensity in dB HL) = 70 Intensity Reflex Max (Intensity in dB HL) = 120 Probe frequency during reflexes: 226 Hz Duration of Signal: 10 s Earside: Contralateral
13 ETF Intact	Tympanometry, Frequency: 226 Hz Number of Measurements = 3 Earside: Ipsilateral
14 ETF Perforated	Frequency during Testing: 226 Hz Duration of Signal: 30 s Earside: Ipsilateral

Swedish Protocols

01 Tymp slow	Tympanometry, frequency: 226 Hz Earside: ipsilateral Pressure change rate: 150 daPa/s
02 Tymp medium	Tympanometry, frequency: 226 Hz Earside: ipsilateral Pressure change rate: 250 daPa/s
03 Tymp fast	Tympanometry, frequency: 226 Hz Earside: ipsilateral Pressure change rate: 400 daPa/s
04 Tymp slow + Reflex Auto	Tympanometry, frequency: 226 Hz Pressure change rate: 150 daPa/s Number of reflexes tested = 4, frequencies: 0.5, 1.0, 2.0, 4.0 kHz Intensity Reflex Min (intensity in dB HL) = 70 Intensity Reflex Max (intensity in dB HL) = 95 Test frequency during reflexes: 226 Hz Earside: Ipsilateral
05 Tymp medium + Reflex Auto	Tympanometry, frequency: 226 Hz Pressure change rate: 250 daPa/s Number of reflexes tested = 4, frequencies: 0.5, 1.0, 2.0, 4.0 kHz Intensity Reflex Min (intensity in dB HL) = 70 Intensity Reflex Max (intensity in dB HL) = 95 Test frequency during reflexes: 226 Hz Earside: Ipsilateral
06 Tymp fast + Reflex Auto	Tympanometry, frequency: 226 Hz Pressure change rate: 400 daPa/s Number of reflexes tested = 4, frequencies: 0.5, 1.0, 2.0, 4.0 kHz Intensity Reflex Min (intensity in dB HL) = 70 Intensity Reflex Max (intensity in dB HL) = 95 Test frequency during reflexes: 226 Hz Earside: Ipsilateral
07 Tymp slow + Reflex 85dB	Tympanometry, frequency: 226 Hz Pressure change rate: 150 daPa/s Number of reflexes tested = 4, frequencies: 0.5, 1.0, 2.0, 4.0 kHz Intensity reflex (intensity in dB HL) = 85 Test frequency during reflexes: 226 Hz Earside: Ipsilateral

**08 Tymp medium + Reflex
85dB**

Tympanometry, frequency: 226 Hz
Pressure change rate: 250 daPa/s
Number of reflexes tested = 4, frequencies: 0.5, 1.0, 2.0, 4.0 kHz
Intensity reflex (intensity in dB HL) = 85
Test frequency during reflexes: 226 Hz
Earside: Ipsilateral

09 Tymp fast + Reflex 85dB

Tympanometry, frequency: 226 Hz
Pressure change rate: 400 daPa/s
Number of reflexes tested = 4, frequencies: 0.5, 1.0, 2.0, 4.0 kHz
Intensity reflex (intensity in dB HL) = 85
Test frequency during reflexes: 226 Hz
Earside: Ipsilateral

**10 Reflex Screening 1 kHz
85dB**

Number of reflexes tested = 1, frequency: 1.0 kHz.
Intensity reflex (intensity in dB HL) = 85
Test frequency during reflexes: 226 Hz
Earside: Ipsilateral

7 Appendix

Literature

L. Macedo de Resende; J. dos Santos Ferreira; S. Alves da Silva Carvalho; I. Oliveira; I. Barreto Bassi, „Tympanometry with 226 and 1000 Hertz tone probes in infants” Braz. j. otorhinolaryngol. vol.78 no.1 São Paulo Jan./Feb. 2012

Carvalho RMM, „Medida de imitância acústica em crianças de zero a oito meses de idade.” São Paulo: Universidade Federal de São Paulo - Escola Paulista de Medicina; 1992

Lu JS, Zhang J, Tang L, Ding W, Zhang L, Guo XP, Zai NL. “Analysis of the 1000 Hz Tympanometry in normal hearing neonates”, Zhonghua Er Bi Yan Hou Tou Jing Wai Ke Za Zhi. 2011 Nov;46(11):905-8

Rafidah Mazlan,, Joseph Kei,, Louise Hickson,, Asaduzzaman Khan,, John Gavranich,, Ron Linning, „High Frequency (1000 HZ) Tympanometry Findings in Newborns: Normative Data Using a Component Compensated Admittance Approach” Australian and New Zealand Journal of Audiology, Volume 31, Issue 1, May 2009, pages 15-24 DOI: 10.1375/audi.31.1.15

Kei J, Allison-Levick J, Dockray J, Harrys R, Kirkegard C, Wong J, “High-frequency (1000 Hz) Tympanometry in normal neonates.” J Am Acad Audiol. 2003;14(1):20-8

Shanks, J., & Shohet, J (2009), “Tympanometry in clinical practice.” In J. Katz, L. Medwetsky, R. Burkard, & L. Hood (Eds.), Handbook of clinical audiology (6th ed.) (pp. 157-188)

Baltimore: Lippincott, Williams & Wilkins

Mrowinski, D., Scholz, G., “Audiometrie Eine Anleitung für die praktische Hörprüfung.” 2006, 3. Auflage, Thieme Verlag

Jerger, J., Norhtern, J., “Clinical impedance audiometry” 1980, Thieme Verlag

Specifications are subject to change without notice.



MAICO Diagnostics GmbH
Sickingenstr. 70-71
10553 Berlin
Germany
Tel.: + 49 30 / 70 71 46-50
Fax: + 49 30 / 70 71 46-99
E-mail: sales@maico.biz
Internet: www.maico.biz